## Vacuum sensor (digital display)

# **MPS-23**

## ● Wide pressure range, -0.1 ~ 1.0MPa

"Vacuum pressure type: -101.3 kPa, Positive pressure:  $-0.1 \sim 1$ MPa Compound pressure:  $-101 \sim 500$ kPa"




## Easy settings

Use UP and DOWN keys to set the value. Automatic settings mode available.


## Standard switch output and analog output

Switch output (open collector) Analog output (1 ~ 5V)

#### How to order

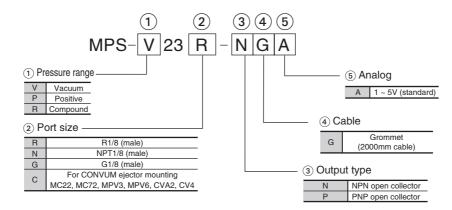

## **CONVUM** mounting reference

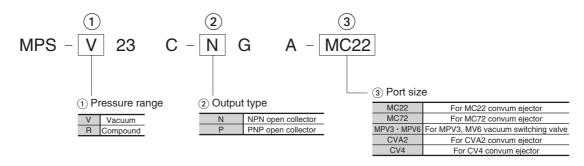

## **Specifications**


Description		Unit	MPS-V23	MPS-P23	MPS-R23
Fluid			Air (non corrosive, nonflammable gas)		
Diaphragm			Silicon diaphragm *1)		
Pressure range		kPa	-101.0 ~ 0kPa	-0.1 ~ 1MPa	-101 ~ 500kPa
Proof pressure		MPa	0.3	1.5	0.8
Operating ambient temperature		℃	0 ~ 50		
Operating humidity		%	35 ~ 85 RH(without condensation)		
Port size			R1/8(male)、NPT1/8(male)、G1/8(male)		
Power supply		V	DC12 ~ $24 \pm 10\%$ 、 Ripple (Vp-p) less than 10%		
Power consumption		mA	Less than 55		
Switch output	type		NPN or PNP open collector 2 points output		
	Current load	mA	max.80mA		
Analog output	Voltage	V	DC1 ~ 5 ( $\pm$ 0.1%), linearity less than $\pm$ 0.5% of F.S., output impedance		
(Option)	output	·	1kΩ*2)		
Repeatability		%	± 0.2 F.S., 1digit or less		
Temperature characteristic			Less than $\pm 2\%$ of F.S. (At standard temperature 25°C, range 0 ~ 50°C)		
Response time		ms	Less than 2.5(Variable 24, 192, 768 options)		
Hysteresis			Variable		
Digital display				its 7 segments, 1 color (R	
Resolution			0.1kPa	0.01MPa	1kPa
Protection structure			IP40		
Vibration resistance			10 ~ 55Hz, total amplitude 1.5mm (2 hours in direction of XYZ)		
Shock resistance		m/s²	980 (3 times in direction of XYZ)		
Electrical connection			Grommet		
Cable	Grommet		φ4 0.15mm <sup>2</sup> 5 lead wires 2000mm		
Mass		g	135 (with lead wire)		

Note 1) Non grease specifications.


Note 2) Analog output of positive pressure type (P) in range of pressure 0 to 1 Mpa can output DC1–5V and 4–20mA. In range of pressure –0.1 to 0 it does not output.

#### Internal circuit


NPN output (Analog voltage output)

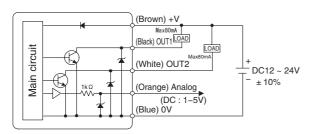

#### PNP output (Analog voltage output)

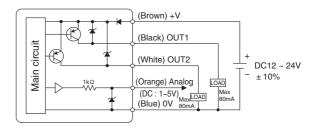

## **Display description**

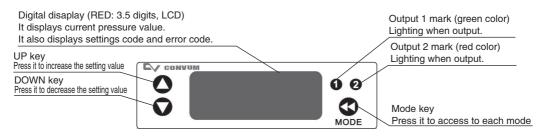


**MPS-23** 


## **Setting method**

Please refer to the instruction manuals for details


## Initial settings mode

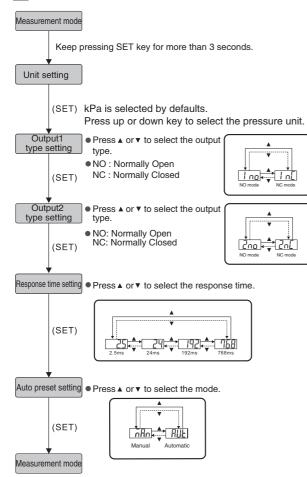

## Manual settings

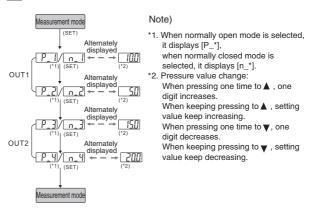


## Auto setting mode

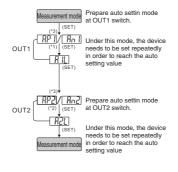

#### Note)

- \*1. If auto pressure value setting is not needed for OUT1, press UP and DOWN keys at the same time to switch with OUT2 pressure value setting mode.
- \*2. If auto pressure value setting is not needed for OUT2, press UP and DOWN keys at the same time to exit and return to measurement mode.
- \*3. It displays [AP\*] at normally open mode and [An\*] at normally close mode.

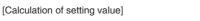

A=The max. pressure value udner auto setting mode B=The min. pressure value udner auto setting mode




## Other settings

1 Zero reset setting:

Press UP and DOWN key at the same time until the "00" is displayed. Release the keys to end the settings.

2 Security lock setting

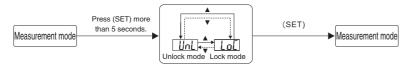

• Use ▲ and ▼ to change status of locking mode.

## **Dimensions** (mm)

