




Valve for several Vacuum Pads with one Vacuum Supply


Fall Prevention Valve

- *Minimize the pressure drop of other circuit when a work-piece falls down.*
- *Even if some vacuum pads are not operated, active vacuum pads can normally work, because the vacuum drop is reduced.*

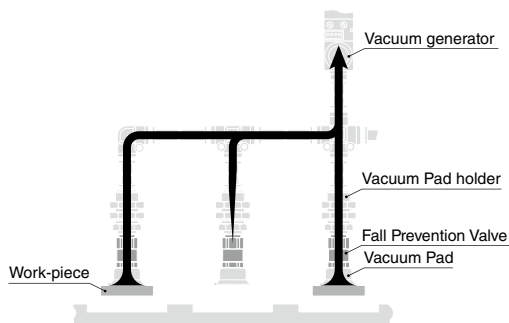

Fall Prevention Valve

Model Designation (Example)

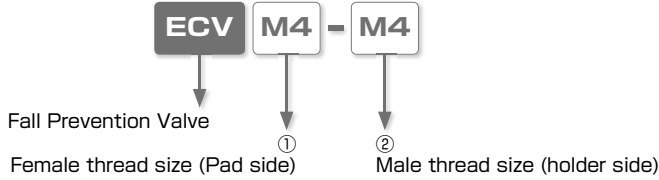

① Female thread size (Pad side)

Thread type	Metric thread				Taper pipe thread
Code	M3	M4	M5	M6	O1
Size (mm)	M3×0.5	M4×0.7	M5×0.8	M6×1	Rc1/8


② Male thread size (holder side)

Thread type	Metric thread				Taper pipe thread
Code	M3	M4	M5	M6	O1
Size (mm)	M3×0.5	M4×0.7	M5×0.8	M6×1	Rc1/8

Specifications

Fluid medium	Air
Operating pressure range	Positive pressure : 0 ~ 0.7MPa Negative pressure : 0 ~ -100kPa
Min. cracking pressure	-7kPa
Operating temp. range	0 ~ 60°C (No freezing)

Construction

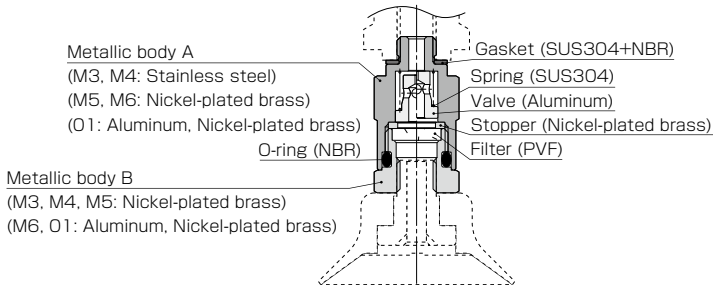

Related Products


Vacuum Pad Series

- Vacuum Pad Standard Series . . . P.428
- Vacuum Pad Sponge Series . . . P.468
- Vacuum Pad Bellows Series . . . P.488
- Vacuum Pad Oval Series P.526
- Vacuum Pad Soft Series P.550
- Vacuum Pad Soft Bellows Series . P.578
- Vacuum Pad Skidproof Series . . P.604
- Vacuum Pad Long Stroke Series . P.658

Mechanism


Fall Prevention

When a work-piece is apart from vacuum pad, the valve is pushed up and shuts a suction passage. Small amount of air is sucked through a small hole at the center of Valve during operation.

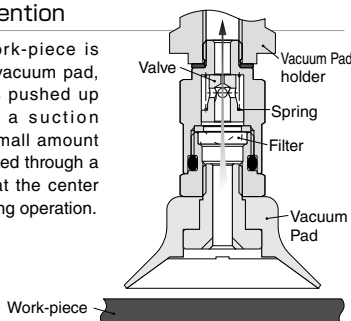

Suction State


When a work-piece adheres to vacuum pad, the valve is pushed down by a spring force due to a suction flow drop. The suction passage between the valve and the body part is open.

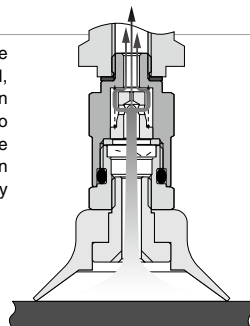

Mechanism

In case several vacuum pads are operated by a single vacuum generator or vacuum pump, the vacuum drop of the whole system is minimized by automatically reducing suction flow of the part where the work-piece falls from the vacuum pad (within the range not causing any problem), or no work-piece is to be sucked, and prevent the troubles like sysstem break down.

Regarding this system, make sure that how many work-pieces could be acceptable on transporting even some work-pieces are apart from vacuum pads. Carry out the test to confirm the suitable number of vacuum pad and provide a safety measure against work-piece drops.

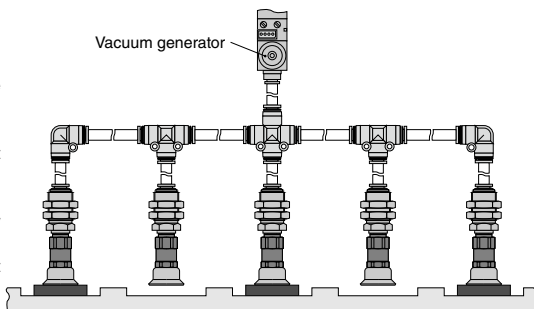

Applicable Vacuum Pad List

Model code	Pad type	Pad size (mm)	Holder type (including Long Stroke)					
			VPA	VPB	VPC	VPD	VPE	VPF
			VPMA	VPMB	—	—	VPME	—
ECVM3-M3	Standard Series (Small type)	ø1.5, ø2, ø3, ø4			—		○	—
	Standard Series (General type & Deep type)	ø10, ø15			○		—	○
	Bellows Series	ø10			○		—	○
ECVM4-M4	Multi-Bellows Series	ø10			○		—	○
	Soft Series	ø4, ø6, ø8, ø10, ø15			○		—	○
	Soft Bellows Series	ø6, ø8, ø10, ø15			○		—	○
	Skidproof Series	ø10			○		—	○
ECVM5-M5	Standard Series (General type)	ø6, ø8			—		○	—
	Ultrathin Series	ø8, ø10, ø15, ø20			○		—	○
	Standard Series (General type & Deep type)	ø20, ø25, ø30, ø40, ø50			○		—	○
ECVM6-M6	Sponge Series	ø20, ø25, ø30, ø35, ø50			○		—	○
	Bellows Series	ø20, ø30, ø40, ø50			○		—	○
	Multi-Bellows Series	ø20, ø30, ø40, ø50			○		—	○
	Oval Series	4×10 ~ 8×30			○		—	○
	Soft Series	ø20, ø30, ø40			○		—	○
	Soft Bellows Series	ø20			○		—	○
	Skidproof Series	ø20, ø30, ø40, ø50			○		—	○

Fall Prevention Valve

Selection Guide

The following "Minimum suction flow of valve cracking pressure " and the example chart show how many Fall Prevention Valve can be installed per a single vacuum generator.


	ECVM3-M3	ECVM4-M4	ECVM5-M5	ECVM6-M6	ECV01-01
Minimum suction flow for valve operation (ℓ/min[ANR])	2.0	5.0	5.0	13.0	13.0
Maximum vacuum drop amount under non-vacuum condition (kPa)	2.0(※1)				

※1. The value of "Maximum vacuum drop amount under non-vacuum condition" differs by vacuum pressure or suction flow.
Since 2.0kPa is the value in consideration of safety, it is not an actual drop amount.

Example 1. VUJ07 • • •
(catalog data)

Maximum vacuum (kPa)	Suction flow (ℓ/min[ANR])
66.5	26

Refer to catalog data and the right chart and find out how many number of Fall Prevention Valve can be installed in vacuum system.

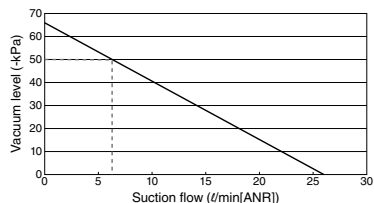

■ Vacuum level: -50kPa

Since suction flow is about 6ℓ/min[ANR], ECV3-M3, ECV4-M4 and ECV5-M5 are available to use.


ECVM3-M3: total quantities in operation and non-operation → 3 pieces

ECVM4-M4 and ECV5-M5: total quantities in operation and non-operation → 1 piece

Example 2. VQH20 • • •
(catalog data)

Maximum vacuum (kPa)	Suction flow (ℓ/min[ANR])
93	110

Refer to catalog data and the right chart, find out how many number of Fall Prevention Valve can be installed in vacuum system.

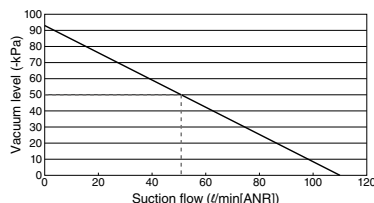

■ Vacuum level: -50kPa

Since suction flow is about 52ℓ/min[ANR], ECV3-M3, ECV4-M4, ECV5-M5, ECV6-M6 and ECV01-01 are available to use.

ECVM3-M3: total quantities in operation and non-operation → 21 pieces (※2)

ECVM4-M4 and ECV5-M5: total quantities in operation and non-operation → 10 pieces

ECVM6-M6 and ECV01-01: total quantities in operation and non-operation → 4 pieces


※2. 25 pieces of ECV3-M3 can be installed through the above theory, but vacuum drop is -2kPa / piece. The calculation here is in case all Fall Prevention Valve are in non-operation (suction).

Vacuum level: $-93 + (2 \times 25) = -43\text{kPa} \rightarrow -93 + (2 \times X) \leq -50 \rightarrow X \leq 21.5$

Therefore, Maximum non-operation quantity is 21 pieces.

■ How to install and disconnect

In order to fix Fall Prevention Valve, tighten hexagonal-columns with a spanner. Refer to the dimensional drawings for detail.

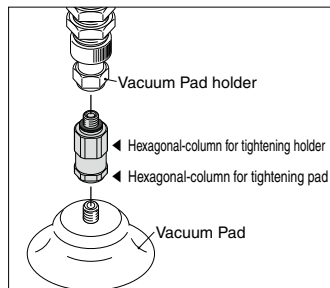

△ Detailed Safety Instructions

Before using PISCO products, be sure to read "Safety Instructions" and "Safety Instruction Manual" on page 35-39 and "Common Safety Instructions for Vacuum Series" on page 47-49.

Warning

1. Fall Prevention Valve is not a check valve. Unless a vacuum supply side has the vacuum retention function, Fall Prevention Valve can not retain vacuum. Do not use it for a vacuum retention purpose.
2. Though several pieces of Fall Prevention Valve are available with a single vacuum supply, make sure to test them with an actual system before operation.
3. When a leakage amount from vacuum pad Sponge Series exceeds suction flow of valve cracking pressure, the valve may start to operate and there is a risk of dropping work-piece.

Caution

1. Safety Rules for Installation and Disconnection

- ① Use a proper tool to install and disconnect Fall Prevention Valve.
- ② Refer to the following recommended tightening torque to tighten thread.

Table: Recommended tightening torque

Thread size	Tightening torque
M3×0.5	0.5N·m
M4×0.7	0.5 ~ 0.6N·m
M5×0.8	1.0 ~ 1.5N·m
M6×1	1.5 ~ 2N·m
R1/8	7.0 ~ 9.0N·m


2. Safety Rules for Fixing Position

- ① When male tread of Fall Prevention Valve is connected with other equipment or vacuum pad holder, use the hexagonal-column of male thread side to tighten them. Refer to the above recommended tightening torque.
 - ② When female thread of Fall Prevention Valve is connected with other equipment or vacuum pad, use the hexagonal-column of female thread side to tighten them. Refer to the above recommended tightening torque.
3. Since there is a small amount of pressure drop during non-vacuum of work-piece, make sure to test Fall Prevention Valve with an actual system especially when a pressure sensor is used to confirm vacuum condition. Pay special attention to adjust the sensor, since the pressure drop becomes smaller by a clogged filter element during non-vacuum of work-piece.

Fall Prevention Valve

ECV Fall Prevention Valve

RoHS compliant

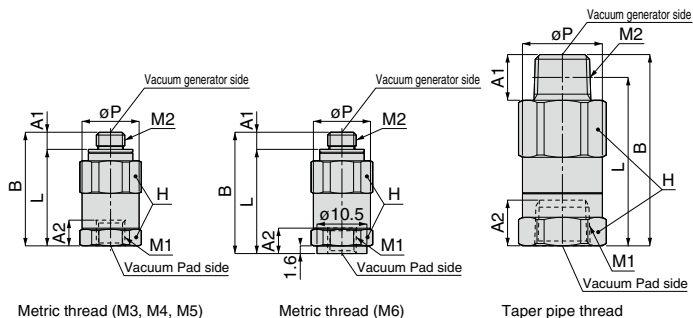

Metric thread (M3, M4, M5)


Metric thread (M6)

Taper pipe thread

Unit : mm

Model code	M1	M2	A1	A2	B	L	oP	Hex. H	Minimum suction flow for valve operation (l/min(ANR))	Vacuum drop amount under non-vacuum condition (kPa)	Effective area (mm ²)		Weight (g)
											Free flow	Control flow	
ECVM3-M3	M3x0.5	M3x0.5	2.5	4.5	18.4	15.9	8	8	2	2	0.7	0.09	4.9
ECVM4-M4	M4x0.7	M4x0.7	2.9	4.5	19.9	17	10	10	5	2	1.6	0.09	7.9
ECVM5-M5	M5x0.8	M5x0.8	3	4.5	19.9	16.9	10	10	5	2	1.6	0.09	6.6
ECVM6-M6	M6x1	M6x1	4	5	28.1	24.1	12	12	13	2	4.0	0.09	12.4
ECV01-01	Rc1/8	R1/8	8	8	33.5	29.5	14	14	13	2	4.8	0.1	10

Replacement Element

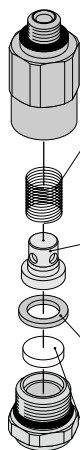

Spring

Spring Model code	Fall Prevention Valve
ECV01-S	ECVM3-M3
ECV02-S	ECVM4-M4, ECVM5-M5
ECV03-S	ECVM6-M6, ECV01-01

Valve

Valve Model code	Fall Prevention Valve
ECV01-V	ECVM3-M3
ECV02-V	ECVM4-M4, ECVM5-M5
ECV03-V	ECVM6-M6, ECV01-01

Stopper

Stopper Model code	Fall Prevention Valve
ECV01-R	ECVM3-M3
ECV02-R	ECVM4-M4, ECVM5-M5
ECV03-R	ECVM6-M6, ECV01-01

Filter

Filter Model code	Fall Prevention Valve
ECV01-E	ECVM3-M3
ECV02-E	ECVM4-M4, ECVM5-M5
ECV03-E	ECVM6-M6, ECV01-01

■ Thoroughly read this catalog to understand the construction of Fall Prevention Valve, and confirm the Safety Rules below when filter elements are replaced. Pay attention not to lose components of this product.

[Safety Rules for Installation and Disconnection]


- ① Use a proper tool to install and disconnect filter elements.
- ② Refer to the following recommended tightening torque to tighten thread.

Table: Recommended tightening torque


Thread size	Tightening torque
M6x0.75	0.8 ~ 1.0N·m (ECVM3-M3)
M8x0.75	1.0 ~ 2.0N·m (ECVM4-M4, ECVM5-M5)
M10x1	3.0 ~ 4.0N·m (ECVM6-M6, ECV01-01)

■ Construction (ECVM3-M3 / ECVM5-M5)

● Pad dia. : $\phi 1.5\text{mm}$, $\phi 2\text{mm}$, 3mm , $\phi 4\text{mm}$

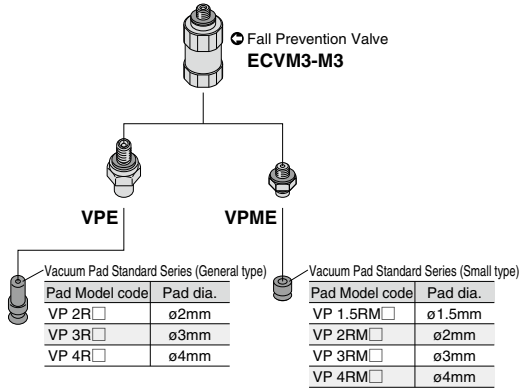


● Pad dia. : $\phi 6\text{mm}$, $\phi 8\text{mm}$, $\phi 10\text{mm}$, $\phi 15\text{mm}$, $\phi 20\text{mm}$

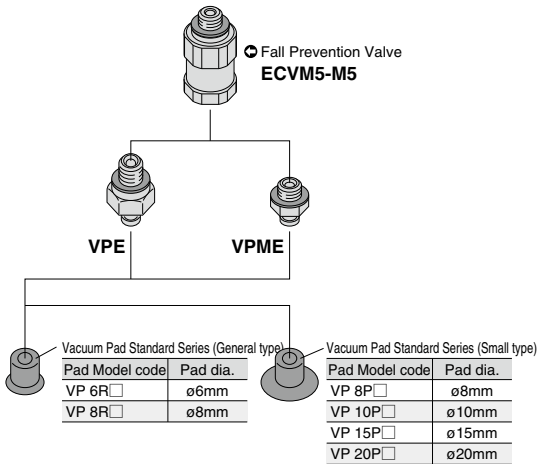


Fall Prevention Valve

Construction (ECVM4-M4)

● Pad dia. : $\phi 10\text{mm}$, $\phi 15\text{mm}$

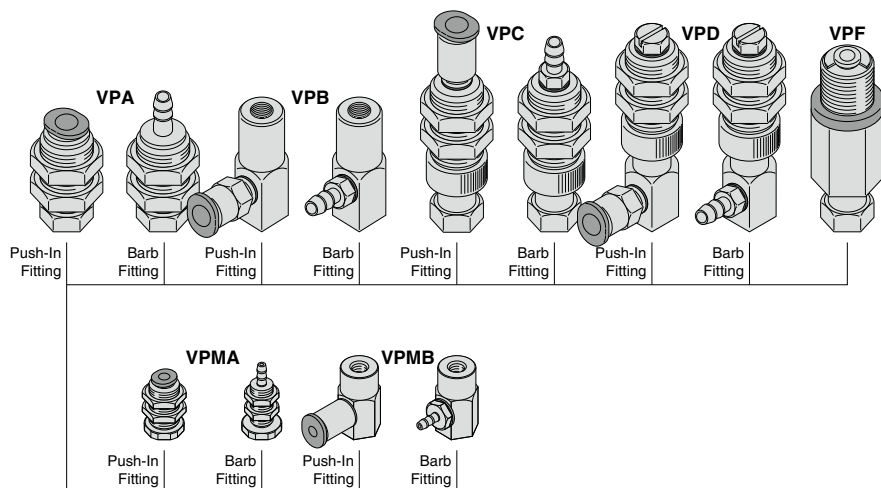


● Fall Prevention Valve
ECVM4-M4

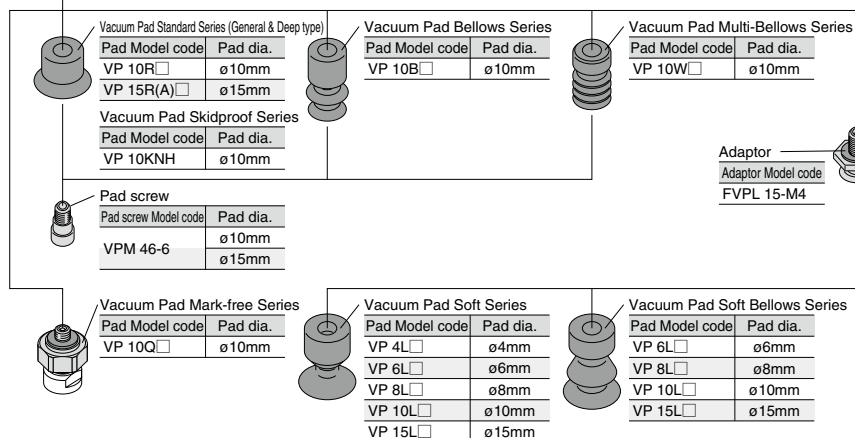

Construction (ECVM6-M6)

● Pad dia. : $\phi 10\text{mm}$, $\phi 15\text{mm}$, $\phi 20\text{mm}$, $\phi 25\text{mm}$, $\phi 30\text{mm}$, $\phi 35\text{mm}$, $\phi 40\text{mm}$, $\phi 50\text{mm}$

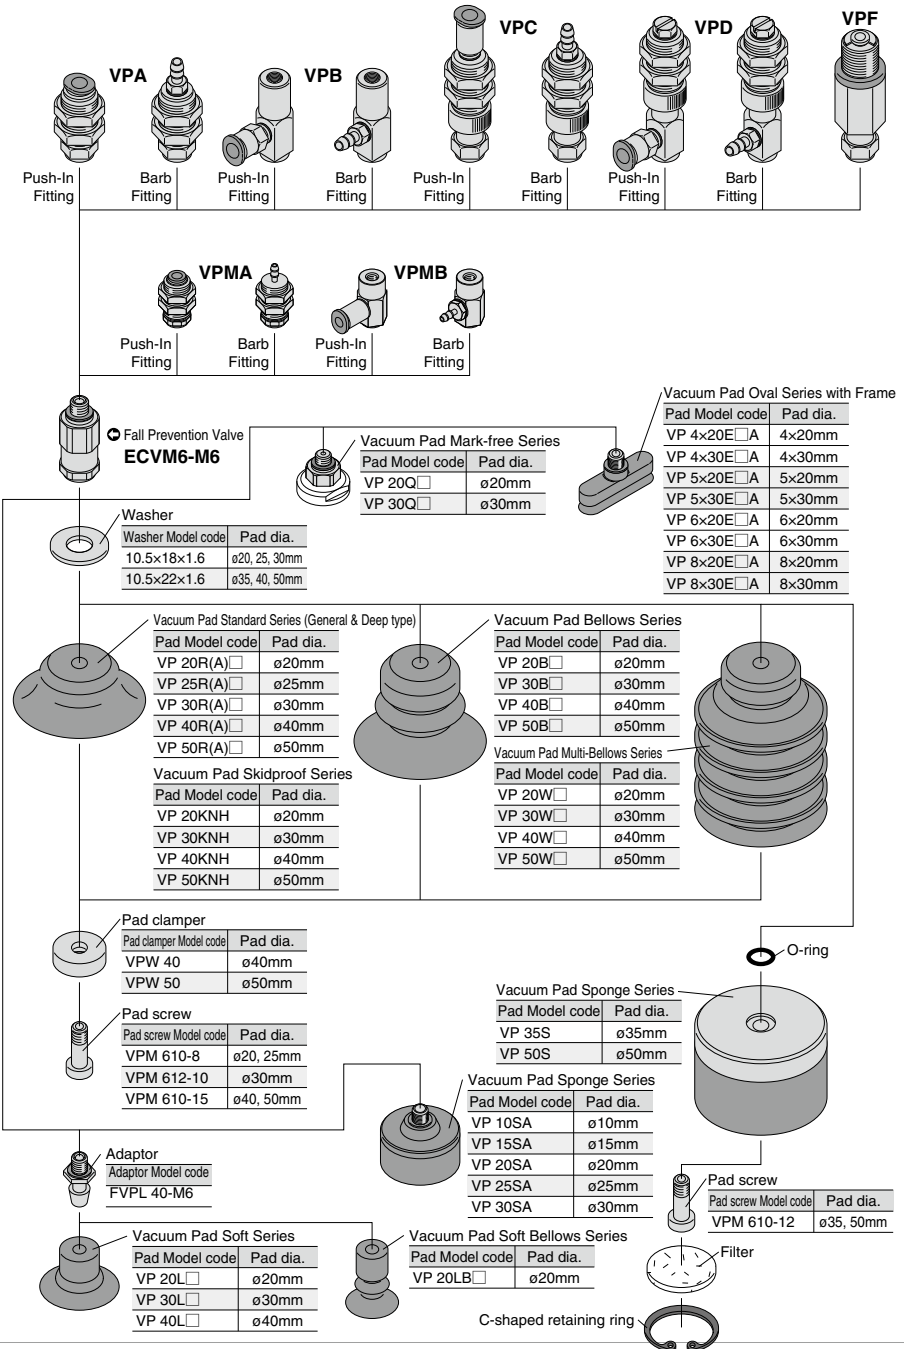



Fall Prevention Valve

VACUUM
GENERATOR

EXTERNAL VACUUM
CONTROLLER

VACUUM
PAD

VACUUM
ACCESSORIES

793

Small Vacuum
Regulator

Action Board
Controller

Vacuum
Filter

Free
Holder

Fall Prevention
Valve



SAFETY Instructions

This safety instructions aim to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370

ISO 4414 : Pneumatic fluid power...Recommendations for the application of equipment to transmission and control systems.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.



Danger

Hazardous conditions. It can cause death or serious personal injury.



Warning

Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.



Caution

Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.



Warning

1. Selection of pneumatic products

- ① A user who is a pneumatic system designer or has sufficient experience and technical expertise should select PISCO products.
- ② Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.

2. Handle the pneumatic equipment with enough knowledge and experience

- ① Improper use of compressed air is dangerous. Assembly, operation and maintenance of machines using pneumatic equipment should be conducted by a person with enough knowledge and experience.

3. Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.

- ① Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
- ② Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
- ③ Restart the machines with care after ensuring to take all preventive measures against sudden movements.

Disclaimer

1. PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
2. PISCO does not take any responsibility for any loss caused by natural disasters, fires not related to PISCO products, acts by third parties, and intentional or accidental damages of PISCO products due to incorrect usage.
3. PISCO does not take any responsibility for any loss caused by improper usage of PISCO products such as exceeding the specification limit or not following the usage the published instructions and catalog allow.
4. PISCO does not take any responsibility for any loss caused by remodeling of PISCO products, or by combinational use with non-PISCO products and other software systems.
5. The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer.



SAFETY INSTRUCTION MANUAL

PISCO products are designed and manufactured for use in general industrial machines. Be sure to read and follow the instructions below.

Danger

1. Do not use PISCO products for the following applications.
 - ① Equipment used for maintaining / handling human life and body.
 - ② Equipment used for moving / transporting human.
 - ③ Equipment specifically used for safety purposes.

Warning

1. Do not use PISCO products under the following conditions.
 - ① Beyond the specifications or conditions stated in the catalog, or the instructions.
 - ② Under the direct sunlight or outdoors.
 - ③ Excessive vibrations and impacts.
 - ④ Exposure / adhere to corrosive gas, inflammable gas, chemicals, seawater, water and vapor. *
 * Some products can be used under the condition above(④), refer to the details of specification and condition of each product.
2. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
3. Turn off the power supply, stop the air supply to PISCO products, and make sure there is no residual air pressure in the pipes before maintenance and inspection.
4. Do not touch the release-ring of push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
5. Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
6. Avoid any load on PISCO products, such as a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
7. As for applications where threads or tubes swing / rotate, use Rotary Joints, High Rotary Joints or Multi-Circuit Rotary Block only. The other PISCO products can be damaged in these applications.
8. Use only Die Temperature Control Fitting Series, Tube Fitting Stainless SUS316 Series, Tube Fitting Stainless SUS316 Compression Fitting Series or Tube Fitting Brass Series under the condition of over 60°C (140° F) water or thermal oil. Other PISCO products can be damaged by heat and hydrolysis under the condition above.
9. As for the condition required to dissipate static electricity or provide an antistatic performance, use EG series fitting and antistatic products only, and do not use other PISCO products. There is a risk that static electricity can cause system defects or failures.
10. Use only Fittings with a characteristic of spatter-proof such as Anti-spatter or Brass series in a place where flame and weld spatter is produced. There is a risk of causing fire by sparks.
11. Turn off the power supply to PISCO products, and make sure there is no residual air pressure in the pipes and equipment before maintenance. Follow the instructions below in order to ensure safety.
 - ① Make sure the safety of all systems related to PISCO products before maintenance.
 - ② Restart of operation after maintenance shall be proceeded with care after ensuring safety of the system by preventive measures against unexpected movements of machines and devices where pneumatic equipment is used.
 - ③ Keep enough space for maintenance when designing a circuit.
12. Take safety measures such as providing a protection cover if there is a risk of causing damages or fires on machine / facilities by a fluid leakage.

⚠ Caution


1. Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
2. When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
3. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
4. Special option "Oil-free" products may cause a very small amount of a fluid leakage. When a fluid medium is liquid or the products are required to be used in harsh environments, contact us for further information.
5. In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.

● Table 1. Tube O.D. Tolerance

mm size	Nylon tube	Polyurethane tube	inch size	Nylon tube	Polyurethane tube
ø1.8mm	—	± 0.05mm	ø1/8	± 0.1mm	± 0.15mm
ø3mm	—	± 0.15mm	ø5/32	± 0.1mm	± 0.15mm
ø4mm	± 0.1mm	± 0.15mm	ø3/16	± 0.1mm	± 0.15mm
ø6mm	± 0.1mm	± 0.15mm	ø1/4	± 0.1mm	± 0.15mm
ø8mm	± 0.1mm	± 0.15mm	ø5/16	± 0.1mm	± 0.15mm
ø10mm	± 0.1mm	± 0.15mm	ø3/8	± 0.1mm	± 0.15mm
ø12mm	± 0.1mm	± 0.15mm	ø1/2	± 0.1mm	± 0.15mm
ø16mm	± 0.1mm	± 0.15mm	ø5/8	± 0.1mm	± 0.15mm

6. Instructions for Tube Insertion

- ① Make sure that the cut end surface of the tube is at right angle without a scratch on the surface and deformations.
- ② When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

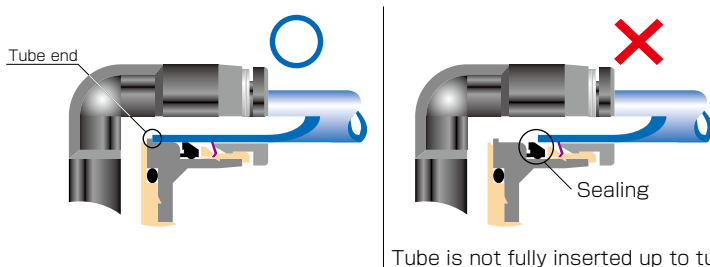

- ③ After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
- ※ When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings:
- ① Shear drop of the lock-claws edge
 - ② The problem of tube diameter (usually small)
- Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.

7. Instructions for Tube Disconnection

- ① Make sure there is no air pressure inside of the tube, before disconnecting it.
- ② Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.

8. Instructions for Installing a fitting

- ① When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ② Refer to Table 2 which shows the recommended tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket and cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage.
- ③ Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

●Table 2: Recommended tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket materials
Metric thread	M3 × 0.5	0.7N·m	—	SUS304 NBR
	M5 × 0.8	1.0 ~ 1.5N·m		
	M6 × 1	2 ~ 2.7N·m		POM
	M3 × 0.5	0.5 ~ 0.6N·m		
	M5 × 0.8	1 ~ 1.5N·m		
	M6 × 0.75	0.8 ~ 1N·m		
Taper pipe thread	M8 × 0.75	1 ~ 2N·m	White	—
	R1/8	7 ~ 9N·m		
	R1/4	12 ~ 14N·m		
	R3/8	22 ~ 24N·m		
Unified thread	R1/2	28 ~ 30N·m	—	SUS304, NBR
	No.10-32UNF	1.0 ~ 1.5N·m		
National pipe thread taper	1/16-27NPT	7 ~ 9N·m	White	—
	1/8-27NPT	7 ~ 9N·m		
	1/4-18NPT	12 ~ 14N·m		
	3/8-18NPT	22 ~ 24N·m		
	1/2-14NPT	28 ~ 30N·m		

※ These values may differ for some products. Refer to each specification as well.

9. Instructions for removing a fitting

- ① When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hex bolt.
- ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

10. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.



Common Safety Instructions for Vacuum Series

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series.

Warning

1. If there is a risk of dropping work-pieces during vacuum suction, take a safety measure against the falling of them.
2. Avoid supplying more than 0.1MPa pressure constantly in a vacuum circuit. Since vacuum generators are not explosive-proof, there is a risk of damaging the products.
3. Pay attention to drop of vacuum pressure caused by problems of the supplied air or the power supply. Decrease of suction force may lead to a danger of falling work-piece so that safety measure against the falling of them is necessary.
4. When more than 2 vacuum pads are plumbed on a single ejector and one of them has a suction problem such as vacuum leak, there is a risk of releasing work-pieces from the other pad due to the drop of the vacuum pressure.
5. Do not use in the way by which exhaust port is blocked or exhaust resistance is increased. Otherwise, there is a risk of no vacuum generation or a drop of the vacuum pressure.
6. Do not use the product in the circumstance of corrosive gas, inflammable gas, explosive gas, chemicals, seawater and vapor or do not expose the product to those. Never allow the product to suck those things.
7. Provide a protective cover on the products when it is exposed to sunlight.
8. Carry out clogging check for silencer element in an ejector and a vacuum filter periodically. Clogged element will be a cause to impair the performance or a cause of troubles.
9. Before replacing the element, thoroughly read and understand the method of filter replacement in the catalog.
10. Make sure the correct port of the vacuum generator by this catalog or marking on the products when plumbing. Wrong plumbing can be a risk to damage the product.
11. Supply clean air without sludge or dusts to an ejector. Do not lubricate by a lubricator. There is a risk of malfunction or performance impairing by impurities and oil contained in the compressed air.
12. Do not apply extreme tension, twist or bending forces on a lead wire. Otherwise, it may cause a wire breaking.
13. Locknut needs to be tightened firmly by hand. Do not use any tool to tighten. In case of using tools to tighten the locknut, it may damage the locknut or the product. Inadequate tightening may loosen the locknut and the initial setting can be changed.
14. Do not force the product to rotate or swing even its resin body is rotatable. It may cause damage to the product and a fluid leakage.
15. Do not supply an air pressure or a dry air to the products over the necessary amount. There is a risk of deteriorating rubber materials and malfunction due to oil.
16. Keep the product away from water, oil drops or dusts. These may cause malfunction. Take a proper measure to protect the product before the operation.

17. Do not use the product in the environment of inflammable or explosive gas / fluid. It can cause a fire or an explosion hazard.
18. Do not use the product in the circumstance of corrosive gas, inflammable gas, explosive gas, chemicals, seawater and vapor or do not expose the product to those. Otherwise, it may be a cause of malfunction.
19. Do not clean or paint the products by water or a solvent.

⚠ Caution

1. Operating pressure range in the catalog is the values during ejector operation. Secure the described value of the supplied air, taking a drop of the pressure into consideration. Insufficient pressure, which does not satisfy the spec, may cause abnormal noise, unstable performance and may negatively affect sensors, bringing troubles at last.
2. Effective cross-section area of the air supply side needs to be three times as large as effective cross-section area of the nozzle bore. When arranging piping or selecting PISCO products, secure required effective cross-section area. Insufficient supply pressure may be a cause to impair performance.
3. A Shorter distance of plumbing with a wider bore is preferable at vacuum system side. A long plumbing with a small bore may result in slow response time at the time of releasing work-piece as well as in failure to secure adequate suction flow rate.
4. Plumb a vacuum switch and an ejector with vacuum switch at the end of vacuum system as much as possible. A long distance between a vacuum switch and a vacuum system end may increase plumbing resistance which may lead to a high vacuum level at the sensor even when no suctioning and a malfunction of vacuum switch. Make sure to evaluate the products in an actual system.
5. Refer to "4. Instructions for Installing a fitting" and "5. Instructions for Removing a fitting" under "Common Safety Instructions for Fittings" , when installing or removing Fittings.
6. Refer to "Common Safety Instructions for Pressure Sensors" and "Detailed Safety Instructions" for the handling of digital vacuum switch sensor.
7. Refer to "Common Safety Instructions for Mechanical Vacuum Sensor" for the handling of mechanical vacuum switch.
8. The material of plastic filter cover for VG, VK, VJ, VZ and VX series is PCTG. Avoid the adherence of Chemicals below to the products, and do not use them under those chemical environments.

● Table Chemical Name

Chemical Name
Thinner
Carbon tetrachloride
Chloroform
Acetate
Aniline
Cyclohexane
Trichloroethylene
Sulfuric acid
Lactic acid
Water soluble cutting oil (alkaline)

* There are more chemicals which should be avoided. Contact us for the use under chemical circumstance.



Vacuum Generator

9. The material of plastic filter cover for VQ and VFU series is PA. Avoid the adherence of chemicals below to the products, and do not use them under those chemical environments.

● Table Chemical Name

Chemical Name
Methanol
Ethanol
Nitric acid
Sulfuric acid
Hydrochloric acid
Lactic acid
Acetone
Chloroform
Aniline
Trichloroethylene
Hydrogen peroxide

* There are more chemicals which should be avoided. Contact us for the use under chemical circumstance.