



# Push-In Fitting Type for Clean Environment Tube Fitting PP Series
















- PP Material for Clean Environment
  - EPDM for Seal Rubber (Option FKM or NBR)
- Two Material Selection PP or SUS304 for Thread
  - Oil-Free
  - Visible Fluid by Transparent Body Color.
    - Clean-Room packaging Option





Coupling

Color Cap ■ Model Designation (Example)

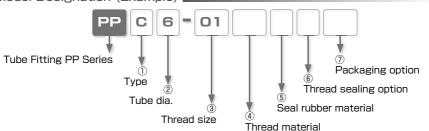

### ① Type

Code	Туре	Code	Туре	Code	Туре	Code	Туре
С	Straight	L	Elbow	В	Branch Tee	D	Run Tee
X	Branch Y	U	Union Straight	G	Unequal Union Straight	<b>V</b>	Union Elbow
E	Union Tee	EG	Unequal Union Tee	Υ	Union Y	W	Unequal Union Y
MP	Bulkhead Union P	GJ	Plug-in Reducer	Р	Plug		

### 2 Tube dia.

Tube dia.	mm size								
Code	4	6	8	10	12				
Size (mm)	ø4	ø6	ø8	ø10	ø12				

③ Thread size (\*. In case that ③ indicates tube dia., select tube dia. from table ②))

Thread size	Metric thread (mm)	Taper pipe thread							
Code	M5	01	01 02 03 04						
Size	M5 × 0.8	R1/8	R1/4	R3/8	R1/2				

4 Thread material

No code: PP SUS: SUS304

5 Seal rubber material

No code: EPDM
F: FKM (option)
N: NBR (option)

(6) Thread sealing option (taper thread only)

No code: Standard(No Sealock and seal tape)
S: Sealock on thread \*\*. only for SUS304 thread

TP: Seal tape on thread

7 Packaging option

No code: Standard package
C: Clean-room package

170

Standard Series Mini Series

Chemical Series PP Series

Thread body (SUS304)


Specifications

Fluid medium	Air / Water( * 1) / Other chemicals ( * 1)
Max. operating pressure	0.9MPa (at 0 ~ 20°C) ※ 2
Max. vacuum	-100kPa
Operating temp. range	0∼80℃ (Seal rubber NBR∶0∼60℃ ) (No freezing)


#### 

- \* 1. Make sure to follow the instructions below when the fluid medium is water or other
  - 1. Surge pressure must be controlled lower than max, operating pressure when using water or liquid as a fluid.
  - 2. Be sure to place Insert Ring into the tube edge when using water as a fluid medium.
  - 3. The specification above may not be applied, depending on the kind of chemicals, solvent, or mixed gases used as fluid medium. Make sure to use PISCO products after verifying their suitability on the user side.
- ※ 2. If operating temp. exceeds 20℃, refer to the following chart "Relation of Operating Temp.
  - & Max. Operating Pressure"

### ■ Relation of Operating Temp. & Max. Operating Pressure

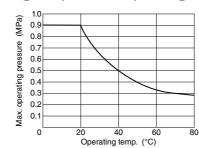

### ■ Construction (Elbow: PPL)

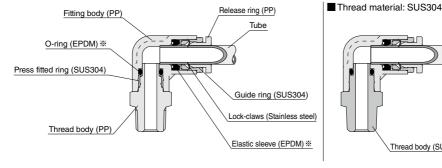

- \* 1. FKM / NBR for option
- \* 2. Gasket (SUS316+ EPDM) is used on metric thread as standard equipment.

Tube Fitting PP Series

NITTI

### 

Before using PISCO products, be sure to read "Safety Instructions" and "Safety Instruction Manual" on page 23 to 27 and "Common Safety Instructions for Fittings" on page 33 to 35.

### <u>W</u>arning

- Check chemical resistance before using the products, when the fluid medium is chemicals, solvent or mixed gases. It may cause damage to the products, the escape of tubes, and a fluid leakage.
- 2. Do not use this series under the condition with vibration or physical impact. These may cause damage to the products, the escape of tubes and a fluid leakage.
- 3. Resin can be deteriorated by being exposed to direct sunlight or ultraviolet rays.
- 4. Max operating pressure varies depending on operating temperature range. Be sure to confirm the chart "Relation of Operating Temp. & Max. Operating Pressure" on Page 180, and use the products within the indicated pressure range.

#### Caution

- 1. The seal rubber material EPDM is not suitable for general air pipings, due to its inferior durability against mineral oil.
- 2. When coating the thread with seal tape or sealant, do not coat 1.5 to 2 screw ridges from the tip of the thread.
- 3. Tighten taper thread by hand until it stops, then use a spanner to tighten it about 2 or 3 more turns. Excessive tightening may break the thread part. Inadequate tightening may cause a loosened thread or a fluid leakage.
- 4. It may cause a fluid leakage by "creep phenomena" due to a long term use of the resin thread. Check the tightening condition periodically and re-torque the thread in case of leaks. If re-torque of the thread does not solve a leakage problem, change it to a new product.
- 5. If there is a possibility of fire by a fluid leakage, implement specific countermeasures such as using a protective cover in order to protect machines / facilities from damages or fire.
- 6. Tube insertion into Tube Fitting PP Series is tighter than that of Tube Fitting Standard Series due to its oil-free specification. Make sure to insert tube up to tube end. When inserting a tube, put a liquid like water on the tube, which does not affect the product and the tube. It will improve the smoothness of tube insertion.

181

Standard Series Mini

Stainles Series

Chemica Series

### ■ Standard Size List

Type	Paga	Thread size		Т	ube O.E	).	
J.	raye	JC IIIIOGU GIZE	4	6	8	10	12
PPC Straight	P.184	R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPL Elbow	P.185	R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPB Branch Tee	P.186	R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPD Run Tee	P.187	R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPX Branch Y	P.188	R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•

### Connection: Thread ⇔ Tube (Thread material: PP) Connection: Thread ⇔ Tube (Thread material: SUS304)

Type	Paga	Thread size		Ī	ube O.E	).	
• •	raye	THICAU 3126	4	6	8	10	12
PPC Straight	P.191	M5 × 0.8	•	•			
		R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPL Elbow	P.192	M5 × 0.8	•	•			
		R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPB Branch Tee	P.193		•	•			
		R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPD Run Tee	P.194	M5 × 0.8	•	•			
		R1/8	•	•	•		
		R1/4	•	•	•	•	
		R3/8		•	•	•	•
		R1/2					•
PPX Branch Y	P.195	M5 × 0.8	•	•			
		R1/8	•	•	•		
		R1/4	•	•	•	•	_
		R3/8		•	•	•	•
		R1/2					

### Connection: Tube ⇔ Tube (Equal dia.)

Type		Page	Tube O.D.						
	туре	raye	4	6	8	10	12		
	PPU Union Straight	P.184	•	•	•	•	•		
	PPV Union Elbow	P.185	•	•	•	•	•		
	DDE Union Tee	P.186	•	•	•	•	•		

Time	Dogo	Tube O.D.						
Type	Page	4	6	8	10	12		
PPY Union Y	P.188	•	•	•	•	•		
PPMP Bulkhead Union P	P.189	•	•	•	•	•		
•								

### Connection: Tube ⇔ Tube (Unequal dia.)

Time	Page	Tube O.D. 1	Tube O.D. 1 Tube O.D. 2					
Type		(mm)	4	6	8	10		
PPG Unequal Union Straight	P.184	6	•					
		8		•				
		10			•			
		12				•		
PPEG Unequal Union Tee	P.187	6	•					
		8		•				
		10			•			
		12				•		

Туре	Page	Tube O.D. 1	Tube O.D. 2				
		(mm)	4	6	8	10	
PPW Unequal Union Y P.	P.189	6	•				
		8		•			
		10			•		
		12				•	

### Connection: Tube ⇔ Fitting

Time	Dogo	Tube dia.		Tube	O.D.	
Type	rage	サイズ(mm)	4	6	8	10
PPGJ Plug-in Reducer	P.190	6	•			
		8	•	•		
		10			•	
		12				

Plug										
Time	Dogo			Tube O.D						
Type	Page	4	6	8	10	12				
alal Diug	D 100	_	•		_					

### How to insert and disconnect

### 1. How to insert and disconnect tubes

① Tube insertion

Insert a tube into Push-In Fitting PP series up to the tube end. Lock-claws bite the tube and fix it automatically, then the elastic sleeve seals around the tube. Refer to "2. Instructions for Tube Insertion" under "Common Safety Instructions for Fittings".



#### 2 Tube disconnection

The tube is disconnected by pushing release-ring to release Lock-claws. Make sure to stop air supply before the tube disconnection.



### 2. How to tighten thread

① Tightening thread

Use a spanner to tighten a hexagonal-column.

Refer to "Table 2: Recommended tightening torque / Sealock color / Gasket materials" under "4.

Instructions for Installing a fitting" in "Common Safety Instructions for Fittings", for the products with thread body material SUS304.

Refer to caution 3 on page 181 for the thread material PP.



■ Applicable Tube and Related Products

Fluororesin (PFA) Tube······P.628

183

Mini Series

Chemic

Series















Unit: mm


Model code	Tube O.D.	R	Α	В	L	Tube end	Hex.	Weight	Effective area	CAD
Model code	øD					С	Н	(g)	(mm²)	file name
PPC4-01 567	4	R1/8	8	21.1	17.1	15	12	2.5	3.4	PPC4-01
PPC4-02 5 6 7	4	R1/4	11	22.3	16.3	15	14	3.5	3.4	PPC4-02
PPC6-01 567		R1/8	8	22.8	18.8		14	3		PPC6-01
PPC6-02567	6	R1/4	11	24.8	10.0	17.1	14	3.5	9.1	PPC6-02
PPC6-03 5 6 7		R3/8	12	24.9	18.6		17	5		PPC6-03
PPC8-01 5 6 7		R1/8	8	27.9	23.9			4.5		PPC8-01
PPC8-02567	8	R1/4	11	26.6	20.6	18.2	17	4.5	22.1	PPC8-02
PPC8-03 5 6 7		R3/8	12	27.5	21.2			6		PPC8-03
PPC10-02 5 6 7	10	R1/4	11	32.6	26.6	20.4	19	7	30.5	PPC10-02
PPC10-03 5 6 7	10	R3/8	12	33.6	27.3	20.4	19	8	30.5	PPC10-03
PPC12-03 5 6 7	12	R3/8	12	37.6	31.3	23.6	22	12	40.7	PPC12-03
PPC12-04 5 6 7	12	R1/2	15	34.1	25.9	23.0		12	40.7	PPC12-04

- \* 1. "L" is a reference value for height dimension after tightening thread.
- ※ 2. ⑤ in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- 3. 6 in Model code / Replaced with "TP" for Seal tape
- \* 4. 7 in Model code / Replaced with "C" for Clean-room package

### PPU Union Straight





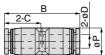

. В . 🗅	
2-C 0	
	1
	ļ

1	Init	•	mm

CAD

Unit: mm

CAD


Model code	Tube O.D. øD	Tube end C		øΡ	Weight (g)	Effective area (mm²)	CAD file name
PPU4 5 7	4	15	31	10	4	5.3	PPU4
PPU6 5 7	6	17.1	35.2	12.5	5.5	12.5	PPU6
PPU8 5 7	8	18.1	37.8	14.5	8	20	PPU8
PPU10 5 7	10	20.4	43.8	17.5	13	35	PPU10
PPU12 5 7	12	23.6	48.2	21	19	59	PPU12

- \* 1. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- \* 2. 7 in Model code / Replaced with "C" for Clean-room package

### PPG Unequal Union Straight





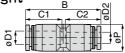

3	_	В	2
	C1	C2	100
<u>6</u>			<i>[</i> ]

Model code	Tube O.D. øD1	Tube O.D. øD2	Tube end C1	Tube end C2			Weight (g)	Effective area (mm²)	CAD file name
PPG6-4 5 7	6	4	17.1	15	34.6	12.5	5.5	5.3	PPG6-4
PPG8-6 5 7	8	6	18.1	17.1	38	14.5	7	12.5	PPG8-6
PPG10-8 5 7	10	8	20.4	18.4	43.3	17.5	12	20	PPG10-8
PPG12-10 5 7	12	10	23.6	20.4	48	21	18	35	PPG12-10

- ※ 1. ⑦ in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- ※ 2. ⑥ in Model code / Replaced with "C" for Clean-room package


185

Series



RoHS compliant



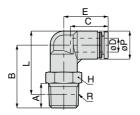






Unit: mm

Model code	Tube O.D. øD	R					Tube end C		Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPL4-01 5 6 7	4	R1/8	8	23.3	24.3	10	15	18.1	10	4	3.4	PPL4-01
PPL4-02 5 6 7	4	R1/4	11	26.3	25.3	10	15	10.1	14	4.5	3.4	PPL4-02
PPL6-01 5 6 7		R1/8	8	25	27.3				12	5		PPL6-01
PPL6-02 5 6 7	6	R1/4	11	28	28.2	12.5	16.9	19.9	14	5.5	8.7	PPL6-02
PPL6-03 5 6 7		R3/8	12	29.8	29.7				17	6.5		PPL6-03
PPL8-01 5 6 7		R1/8	8	28	31.3				14	7		PPL8-01
PPL8-02 5 6 7	8	R1/4	11	31	32.2	14.5	18.1	22.7	14	7.5	17.2	PPL8-02
PPL8-03 5 6 7		R3/8	12	32.8	33.7				17	8.5		PPL8-03
PPL10-02 5 6 7	10	R1/4	11	36	38.7	17.5	20.4	26.4	17	12	25.9	PPL10-02
PPL10-03 5 6 7	10	R3/8	12	37	39.4	17.5	20.4	20.4	1 /	13	25.9	PPL10-03
PPL12-03 5 6 7	12	R3/8	12	39	43.2	21	23.6	29.6	22	18	37.6	PPL12-03
PPL12-04 5 6 7	12	R1/2	15	42	44.3	21	23.0	29.0		19	37.0	PPL12-04

- \* 1. "L" is a reference value for height dimension after tightening thread.
- \* 2. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- 3. 6 in Model code / Replaced with "TP" for Seal tape
- ¾ 4. ⑦ in Model code / Replaced with "C" for Clean-room package



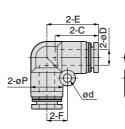





Unit: mm

Model code	Tube O.D. øD	øΡ	Tube end C	Е	ød	F	Т	Weight (g)	Effective area (mm²)	CAD file name
PPV4 5 7	4	10	15	17	3.2	6.5	10	4.5	4.2	PPV4
PPV6 5 7	6	12.5	17	20.2	3.2	8	12.5	6	10	PPV6
PPV850	8	15	18.1	22.4	4.2	10	15.6	9	16.5	PPV8
PPV10 5 7	10	17.5	20.9	26.4	4.2	12	18.2	14	30	PPV10
PPV12 5 7	12	21	23.6	29.6	4.2	14	21	20	47	PPV12

※ 1. ⑤ in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

※ 2. ⑦ in Model code / Replaced with "C" for Clean-room package








RoHS compliant



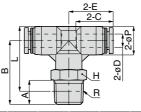






Unit: mm

Model code	Tube O.D. øD	R	А	В	L	øΡ	Tube end C	Е	Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPB4-01 5 6 7	4	R1/8	8	23.2	24.2	10	15	17	10	6	3.3	PPB4-01
PPB4-02 5 6 7	4	R1/4	11	26.2	25.2	10	15	17	14	6.5	3.3	PPB4-02
PPB6-01 5 6 7		R1/8	8	26	28.5				12	8		PPB6-01
PPB6-02 5 6 7	6	R1/4	11	29	29.5	13	17.1	20.3	14	8.5	8	PPB6-02
PPB6-03 5 6 7		R3/8	12	30.8	31				17	9.5		PPB6-03
PPB8-01 5 6 7		R1/8	8	26.3	29.8				14	11		PPB8-01
PPB8-02 5 6 7	8	R1/4	11	29.3	30.8	15	18.4	22.4	14	12	17.3	PPB8-02
PPB8-03 5 6 7		R3/8	12	31.1	32.3				17	12		PPB8-03
PPB10-02 5 6 7	10	R1/4	11	36	38.7	17.5	20.4	25.4	17	18	26.3	PPB10-02
PPB10-03 5 6 7	10	R3/8	12	37	39.4	17.5	20.4	20.4	17	19	20.3	PPB10-03
PPB12-03 5 6 7	10	R3/8	12	39	43.2	21	23.1	28.6	22	26	37.2	PPB12-03
PPB12-04 5 6 7	12	R1/2	15	42	44.3	21	23.1	20.0	22	28	37.2	PPB12-04

- \* 1. "L" is a reference value for height dimension after tightening thread.
- \* 2. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- \*3. 6 in Model code / Replaced with "TP" for Seal tape
- $\ensuremath{\,\%\,}$  4.  $\ensuremath{\,\bigcirc}$  in Model code / Replaced with "C" for Clean-room package





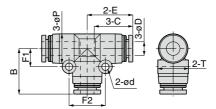




CAD

Model code	Tube O.D. øD	øΡ	Tube end C	Е	В	ød	F1	F2	Т	Weight (g)	Effective area (mm²)	CAD file name
PPE457	4	10	15	17	17	3.2	6.5	13	10	6.5	5.3	PPE4
PPE65⑦	6	13	17.1	20.2	20.2	3.2	8	16	13	9	12.5	PPE6
PPE857	8	15	18.1	22.2	22.2	3.2	9	18	15	13	20	PPE8
PPE10 5 7	10	17.5	19.8	25.4	25.4	4.2	12	24	17.5	21	35	PPE10
PPE1250	12	21	23.1	28.6	28.4	4.2	14	28	21.7	30	59	PPE12

- \*\* 1. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- ※ 2. ⑦ in Model code / Replaced with "C" for Clean-room package

### Tube Fitting PP Series

PPEG Unequal Union Tee

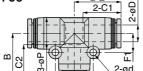






RoHS compliant



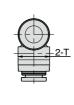

Unit: mm

Model code	Tube O.D. øD1	Tube O.D. øD2	øΡ	Tube end C1	Tube end C2					F2		Weight (g)	Effective area (mm²)	CAD file name
PPEG6-4 5 7	6	4	13	17.1	15	20.2	19.6	3.2	8	16	13.5	9	4.1	PPEG6-4
PPEG8-6 5 7	8	6	15	18.1	17	22.2	22.4	3.2	9	18	15	12	10.3	PPEG8-6
PPEG10-8 5 7	10	8	17.5	19.8	18.1	25.4	24.9	4.2	12	24	17.5	19.5	19.6	PPEG10-8
PPEG12-10 5 7	12	10	21	23.1	20.9	28.6	28.2	4.2	14	28	21.7	28	32.5	PPEG12-10

øD2

\* 1. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

 $\ensuremath{\,\%\,} 2.$   $\ensuremath{\,\bigcirc}$  in Model code / Replaced with "C" for Clean-room package




RoHS compliant

187

Series



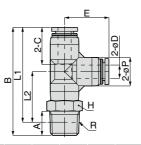



Unit: mm

Model code	Tube O.D. øD	R	А	В	L1	L2	øΡ	Tube end C	Е	Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPD4-01 567	4	R1/8	8	40.2	36.2	19.2	10	15	17	10	6	3.3	PPD4-01
PPD4-02 5 6 7	4	R1/4	11	43.2	37.2	20.2	10	15	17	14	6.5	3.3	PPD4-02
PPD6-01 567		R1/8	8	46.3	42.3	22				12	8		PPD6-01
PPD6-02 5 6 7	6	R1/4	11	49.3	43.3	23	13	17.1	20.2	14	8.5	8.8	PPD6-02
PPD6-03 5 6 7		R3/8	12	51.1	44.8	24.5				17	9.5		PPD6-03
PPD8-01 567		R1/8	8	50.4	46.4	24.2				14	11		PPD8-01
PPD8-02 5 6 7	8	R1/4	11	53.4	47.4	25.2	15	18.1	22.2	14	12	18	PPD8-02
PPD8-03 5 6 7		R3/8	12	55.2	48.9	26.7				17	13		PPD8-03
PPD10-02567	10	R1/4	11	61.4	55.4	30	17.5	20.4	25.4	17	18	26.2	PPD10-02
PPD10-03 5 6 7	10	R3/8	12	62.4	56.1	30.7	17.5	20.4	20.4	17	19	20.2	PPD10-03
PPD12-03 5 6 7	12	R3/8	12	67.8	61.5	32.9	21	23.1	28.4	22	26	37.4	PPD12-03
PPD12-04 5 6 7	12	R1/2	15	70.8	62.6	34	اے	23.1	20.4		28	37.4	PPD12-04

\* 1. "L1" and "L2" are reference values for height dimensions after tightening thread.

\*2. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

3. 6 in Model code / Replaced with "TP" for Seal tape


\* 4. 7 in Model code / Replaced with "C" for Clean-room package





RoHS compliant



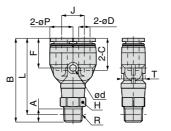





Unit: mm


Model code	Tube O.D. øD	R	А	В	L	øΡ	Tube end C	J	ød	F	Т	Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPX4-01 5 6 7	4	R1/8	8	40.7	36.7	10	1.5	4.4	2.4	110	4.0	10	6.5		PPX4-01
PPX4-02 5 6 7	4	R1/4	11	43.7	37.7	10	15	11	3.4	14.2	10	14	7	3	PPX4-02
PPX6-01 5 6 7		R1/8	8	44.5	40.5							12	8		PPX6-01
PPX6-02567	6	R1/4	11	47.5	41.5	12.5	17.1	12	3.4	15.9	12.5	14	8.5	6.2	PPX6-02
PPX6-03567		R3/8	12	49.3	43							17	9.5		PPX6-03
PPX8-01 567		R1/8	8	48.7	44.7							14	12		PPX8-01
PPX8-02 5 6 7	8	R1/4	11	51.7	45.7	14.5	18.1	14	3.4	17.2	14.5	14	12	15.7	PPX8-02
PPX8-03 5 6 7		R3/8	12	53.5	47.2							17	13		PPX8-03
PPX10-02567	10	R1/4	11	58.5	52.5	18	20.9	18	4.5	19.7	18	17	20	22.2	PPX10-02
PPX10-03 5 6 7	10	R3/8	12	59.5	53.2	18	20.9	10	4.5	19.7	18	17	21	22.2	PPX10-03
PPX12-03 5 6 7	10	R3/8	12	64.7	58.4	21	23.6	20	4.2	22.4	21	22	28	29.8	PPX12-03
PPX12-04 5 6 7	12	R1/2	15	67.7	59.5		23.0	20	4.2	22.4			30	29.8	PPX12-04

- $\frak{\%}$  1. "L" is a reference value for height dimension after tightening thread.
- \*\* 2. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- \*3. 6 in Model code / Replaced with "TP" for Seal tape
- ¾ 4. ⑦ in Model code / Replaced with "C" for Clean-room package







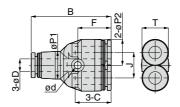






Model code	Tube O.D. øD	В	øP1	øP2	Tube end C	J	ød	F	Т	Weight (g)		CAD file name
PPY4 5 7	4	33	10	10	15	11	3.4	14.2	10	6.5	4.2	PPY4
PPY6 5 7	6	38	13	12.5	17.1	12	3.4	15.9	12.5	9	10	PPY6
PPY8 5 7	8	42.4	15	14.5	18.1	14	3.4	17.2	14.5	13	16.5	PPY8
PPY10 5 7	10	48.8	18	18	20.9	18	4.5	19.7	18	22	27	PPY10
PPY12 5 7	12	55.2	21.5	21	23.6	20	4.2	22.4	21	31	38	PPY12

- \* 1. ⑤ in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- ※ 2. ⑦ in Model code / Replaced with "C" for Clean-room package

### PPW Unequal Union Y





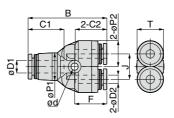





Unit: mm

Model code	Tube O.D. øD1	Tube O.D. øD2		øP1	øP2	Tube end C1	Tube end C2		ød				Effective area (mm²)	CAD file name
PPW6-4 5 7	6	4	37.4	13	12.5	17.1	15	12	3.4	15.3	12.5	8.5	4.2	PPW6-4
PPW8-6 5 7	8	6	42.6	15	14.5	18.1	17.1	14	3.4	17.4	14.5	11.5	10	PPW8-6
PPW10-8 5 7	10	8	48.3	18	18	20.9	18.2	18	4.5	19.2	18	18.5	17	PPW10-8
PPW12-10 5 7	12	10	55	21.5	21	23.6	20.4	20	4.2	22.2	21	28.5	27	PPW12-10

\* 1. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)


\* 2. (7) in Model code / Replaced with "C" for Clean-room package

### PPMP Bulkhead Union P

RoHS compliant

189



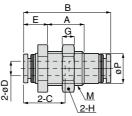





Unit: mm

Model code	Tube O.D. øD	М	В	Е	А	øΡ	Tube end C	Hex. H	G	Weight (g)	Effective area (mm²)	CAD file name
PPMP4 5 7	4	M12 × 1.5	31.6	9.3	12	10	15	14	5	7.2	4.2	PPMP4
PPMP6 5 7	6	M14 × 1.5	35.8	9.9	15	12.3	17.1	17	5	10.2	10.7	PPMP6
PPMP8 5 7	8	M16 × 1.5	38.4	10.7	15.5	14.2	18.1	19	6	14.3	19.1	PPMP8
PPMP10 5 7	10	M20 × 2	43.4	13.2	18.5	17.5	20.9	24	6	24.4	39.6	PPMP10
PPMP1250	12	M24 × 2	48.8	13.4	20.5	21	23.6	27	6	30.4	47.6	PPMP12

\* 1. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

※ 2. ⑦ in Model code / Replaced with "C" for Clean-room package

CAD

Unit: mm

PPGJ12-10

CAD

Unit: mm

PPP4


PPP6

PPP8

PPP10

PPP12

31.5

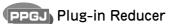







Effective area PPGJ6-4 PPGJ6-4(5)(7) 4 37.8 22.3 10 15 2.4 5 15 3 PPGJ8-4507 40.3 4.5 PPGJ8-4 4 8 23.3 12.5 PPGJ8-6 5 (7) 40.9 17.1 3.2 11.5 PPGJ8-6 6 43.9 28.3 12.5 17.1 3.6 PPGJ10-6 PPGJ10-657 6 11.5 10 PPGJ10-8(5)(7) 8 43.7 24.8 14.5 18.1 4.7 22.5 PPGJ10-8 PPGJ12-8 5 7 49.7 33.5 14.5 18.1 5.4 23 PPGJ12-8 8

28.8

17.5

20.4

7.9

\* 1. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

50.2

※ 2. ⑦ in Model code / Replaced with "C" for Clean-room package

10

12



PPGJ12-10 5 7



PPP4⑦

PPP6⑦

PPP8⑦

PPP10(7)

PPP12⑦




4

6

8

10

12

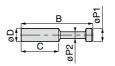

øP2

3

3

4

5

6

15

17

18.1

20.2

23.4

0.5

0.5

1

2

2.5

øP1

5

7

9

11

13

* 1. 7 in Model code / Repl	aced with "C" for Clean-room package
-----------------------------	--------------------------------------

27.5

32.5

36.5

42


44

### PPC-SUS Straight Thread material : SUS304







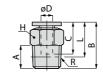



Model code	Tube O.D. øD	R				Tube end C	Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPC4-M5SUS 5 6		$M5 \times 0.8$	3	20.1	17.1		10	6	1.9	PPC4-M5SUS
PPC4-01SUS 5 6 7	4	R1/8	8	21.1	17.1	15	10	8	5.3	PPC4-01SUS
PPC4-02SUS 5 6 7		R1/4	11	21.1	15.1		14	15	0.5	PPC4-02SUS
PPC6-M5SUS 56		$M5 \times 0.8$	3	22.2	19.2		12	8.5	1.9	PPC6-M5SUS
PPC6-01SUS 5 6 7	6	R1/8	8	22.7	18.7	17.1	12	0.0		PPC6-01SUS
PPC6-02SUS 5 6 7	0	R1/4	11	24.7	10.7	17.1	14	16	12.5	PPC6-02SUS
PPC6-03SUS 5 6 7		R3/8	12	23.7	17.4		17	25		PPC6-03SUS
PPC8-01SUS 567		R1/8	8	27.9	23.9		14	14.5		PPC8-01SUS
PPC8-02SUS 5 6 7	8	R1/4	11	26.6	20.6	18.2	14	14.5	20	PPC8-02SUS
PPC8-03SUS 5 6 7		R3/8	12	23.9	17.6		17	21.5		PPC8-03SUS
PPC10-02SUS 5 6 7	10	R1/4	11	30	24	20.9	17	18.5	35	PPC10-02SUS
PPC10-03SUS 5 6 7	10	R3/8	12	29.5	23.2	20.9	17	24	33	PPC10-03SUS
PPC12-03SUS 5 6 7	12	R3/8	12	32.1	25.8	23.5	21	32.5	59	PPC12-03SUS
PPC12-04SUS 5 6 7	12	R1/2	15	34.1	25.9	23.5	۷ ا	46	59	PPC12-04SUS

- \* 1. "L" is a reference value for height dimension after tightening taper thread.
- \* 2. (5) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- $\ensuremath{\%}\xspace$  3.  $\ensuremath{\textcircled{6}}\xspace$  in Model code / Replaced with "S" for Sealock, or "TP" for Seal tape on thread.
- ※ 4. ⑦ in Model code / Replaced with "C" for Clean-room package










### PPL-SUS Elbow Thread material: SUS304







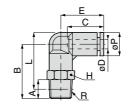



Model code	Tube O.D. øD	R		В	L	øΡ	Tube end C		Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPL4-M5SUS 56		M5×0.8	3	20.3	22.3				10	7	1.5	PPL4-M5SUS
PPL4-01SUS 5 6 7	4	R1/8	8	23.3	24.3	10	15	18.1	10	10	4.2	PPL4-01SUS
PPL4-02SUS 5 6 7		R1/4	11	26.3	25.3				14	18.5	4.2	PPL4-02SUS
PPL6-M5SUS 56		M5×0.8	3	22	25.3				12	11	1.5	PPL6-M5SUS
PPL6-01SUS 5 6 7	6	R1/8	8	25	27.3	12.5	16.9	19.9	12	12.5		PPL6-01SUS
PPL6-02SUS 5 6 7	0	R1/4	11	28	28.2	12.5	10.9	19.9	14	20	10	PPL6-02SUS
PPL6-03SUS 5 6 7		R3/8	12	29.8	29.7				17	33		PPL6-03SUS
PPL8-01SUS 5 6 7		R1/8	8	28	31.3				14	16		PPL8-01SUS
PPL8-02SUS 5 6 7	8	R1/4	11	31	32.2	14.5	18.1	22.7	14	21.5	16.5	PPL8-02SUS
PPL8-03SUS 5 6 7		R3/8	12	32.8	33.7				17	35		PPL8-03SUS
PPL10-02SUS 5 6 7	10	R1/4	11	36	38.7	17.5	20.4	26.4	17	30.5	30	PPL10-02SUS
PPL10-03SUS 5 6 7	10	R3/8	12	37	39.4	17.5	20.4	20.4	17	38	30	PPL10-03SUS
PPL12-03SUS 5 6 7	10	R3/8	12	39	43.2	21	23.6	29.6	21	45.5	47	PPL12-03SUS
PPL12-04SUS 5 6 7	12	R1/2	15	42	44.3	21	23.0	29.0		60	47	PPL12-04SUS

 $<sup>\</sup>mbox{\%}$  1. "L" is a reference value for height dimension after tightening taper thread.





<sup>\* 2.</sup> ⑤ in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

<sup>\* 3. 6</sup> in Model code / Replaced with "S" for Sealock, or "TP" for Seal tape on thread.

 $<sup>\</sup>ensuremath{\,\%\,}$  4.  $\ensuremath{\,\bigcirc}$  in Model code / Replaced with "C" for Clean-room package


### PPB.SUS Branch Tee Thread material : SUS304

CAD CAD







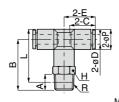



Unit: mm

Model code	Tube O.D. øD	R		В	L	øΡ	Tube end C	Е	Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPB4-M5SUS 5 6		M5×0.8	3	20.2	22.2				10	9	1.5	PPB4-M5SUS
PPB4-01SUS 5 6 7	4	R1/8	8	23.2	24.2	10	15	17	10	12	4.1	PPB4-01SUS
PPB4-02SUS 5 6 7		R1/4	11	26.2	25.2				14	20.5	4.1	PPB4-02SUS
PPB6-M5SUS 56		M5×0.8	3	23	26.5				12	14	1.5	PPB6-M5SUS
PPB6-01SUS 5 6 7	6	R1/8	8	26	28.5	13	17.1	20.3	12	15.5		PPB6-01SUS
PPB6-02SUS 5 6 7	В	R1/4	11	29	29.5	13	17.1	20.3	14	23	10	PPB6-02SUS
PPB6-03SUS 5 6 7		R3/8	12	30.8	31				17	35.5		PPB6-03SUS
PPB8-01SUS 5 6 7		R1/8	8	26.3	29.8				14	19.5		PPB8-01SUS
PPB8-02SUS 5 6 7	8	R1/4	11	29.3	30.8	15	18.4	22.4	14	25	16.5	PPB8-02SUS
PPB8-03SUS 5 6 7		R3/8	12	31.1	32.3				17	37.5		PPB8-03SUS
PPB10-02SUS 5 6 7	10	R1/4	11	36	38.7	17.5	20.4	25.4	17	36.5	30	PPB10-02SUS
PPB10-03SUS 5 6 7	10	R3/8	12	37	39.4	17.5	20.4	25.4	17	44	30	PPB10-03SUS
PPB12-03SUS 5 6 7	10	R3/8	12	39	43.2	21	23.1	28.6	21	54.5	47	PPB12-03SUS
PPB12-04SUS 5 6 7	12	R1/2	15	42	44.3	21	23.1	20.0	۷۱	69	47	PPB12-04SUS

¾ 1. "L" is a reference value for height dimension after tightening taper thread.

\* 2. (s) in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

\* 3. 6 in Model code / Replaced with "S" for Sealock, or "TP" for Seal tape on thread.

¾ 4. ⑦ in Model code / Replaced with "C" for Clean-room package










### PPD.SUS Run Tee Thread material: SUS304







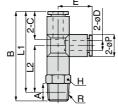



Model code	Tube O.D. øD	R				L2		Tube end C		Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPD4-M5SUS 56		M5×0.8	3	37.2	34.2	17.2				10	9	1.9	PPD4-M5SUS
PPD4-01SUS 5 6 7	4	R1/8	8	40.2	36.2	19.2	10	15	17	10	12	5.3	PPD4-01SUS
PPD4-02SUS 5 6 7		R1/4	11	43.2	37.2	20.2				14	20.5	5.5	PPD4-02SUS
PPD6-M5SUS 56		$M5 \times 0.8$	3	43.3	40.3	20				12	14	1.9	PPD6-M5SUS
PPD6-01SUS 5 6 7	6	R1/8	8	46.3	42.3	22	13	17.1	20.2	12	15.5		PPD6-01SUS
PPD6-02SUS 5 6 7	0	R1/4	11	49.3	43.3	23	13	17.1	20.2	14	23	12.5	PPD6-02SUS
PPD6-03SUS 5 6 7		R3/8	12	51.1	44.8	24.5				17	35.5		PPD6-03SUS
PPD8-01SUS 5 6 7		R1/8	8	50.4	46.4	24.2				14	20		PPD8-01SUS
PPD8-02SUS 5 6 7	8	R1/4	11	53.4	47.4	25.2	15	18.1	22.2	14	25.5	20	PPD8-02SUS
PPD8-03SUS 5 6 7		R3/8	12	55.2	48.9	26.7				17	38		PPD8-03SUS
PPD10-02SUS 5 6 7	40	R1/4	11	61.4	55.4	30	17.5	20.4	25.4	17	36.5	35	PPD10-02SUS
PPD10-03SUS 5 6 7	10	R3/8	12	62.4	56.1	30.7	17.5	20.4	25.4	17	44	30	PPD10-03SUS
PPD12-03SUS 5 6 7	12	R3/8	12	67.8	61.5	32.9	21	23.1	28.4	21	54.5	59	PPD12-03SUS
PPD12-04SUS 5 6 7	12	R1/2	15	70.8	62.6	34	اکا	۷.۱	20.4	١٧	69	59	PPD12-04SUS

- \* 1. "L1" and "L2" are reference values for height dimensions after tightening taper thread.
- ※2. ⑤ in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)
- $\mbox{\%}$  3.  $\mbox{(\^{s})}$  in Model code / Replaced with "S" for Sealock, or "TP" for Seal tape on thread.
- \* 4. 7 in Model code / Replaced with "C" for Clean-room package




### PPX.SUS Branch Y Thread material: SUS304







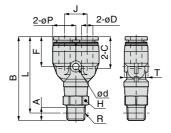



Metric thread type

Unit: mm

Model code	Tube O.D. øD	R	А	В	L	øΡ	Tube end C	J	ød	F	Т	Hex. H	Weight (g)	Effective area (mm²)	CAD file name
PPX4-M5SUS 5 6		M5×0.8	3	37.7	34.7							10	9.5	1.5	PPX4-M5SUS
PPX4-01SUS 5 6 7	4	R1/8	8	40.7	36.7	10	15	11	3.4	14.2	10	10	12.5	4.2	PPX4-01SUS
PPX4-02SUS 5 6 7		R1/4	11	43.7	37.7							14	20.5	4.2	PPX4-02SUS
PPX6-M5SUS 56		M5×0.8	3	41.5	38.5							12	14	1.5	PPX6-M5SUS
PPX6-01SUS 5 6 7		R1/8	8	44.5	40.5	12.5	17.1	12	3.4	15.9	12.5	12	15.5		PPX6-01SUS
PPX6-02SUS 5 6 7	6	R1/4	11	47.5	41.5	12.5	17.1	12	3.4	15.9	12.5	14	23	10	PPX6-02SUS
PPX6-03SUS 5 6 7		R3/8	12	49.3	43							17	21		PPX6-03SUS
PPX8-01SUS 5 6 7		R1/8	8	48.7	44.7							14	20.5		PPX8-01SUS
PPX8-02SUS 5 6 7	8	R1/4	11	51.7	45.7	14.5	18.1	14	3.4	17.2	14.5	14	25.5	16.5	PPX8-02SUS
PPX8-03SUS 5 6 7		R3/8	12	53.5	47.2							17	24.5		PPX8-03SUS
PPX10-02SUS 5 6 7	10	R1/4	11	58.5	52.5	18	20.9	18	4.5	19.7	18	17	38	30	PPX10-02SUS
PPX10-03SUS 5 6 7	10	R3/8	12	59.5	53.2	10	20.9	10	4.5	19.7	10	17	45.5	30	PPX10-03SUS
PPX12-03SUS 5 6 7	12	R3/8	12	64.7	58.4	21	23.6	20	4.2	22.4	21	21	56.5	37	PPX12-03SUS
PPX12-04SUS 5 6 7	12	R1/2	15	67.7	59.5	اعا	23.0		4.2	22.4	١٤	اے	71	57	PPX12-04SUS

\* 1. "L" is a reference value for height dimension after tightening taper thread.

※2. ⑤ in Model code / Replaced with "F" (FKM), or "N" (NBR) for Seal rubber material change (No code: EPDM)

💥 3. ⑥ in Model code / Replaced with "S" for Sealock, or "TP" for Seal tape on thread.

¾ 4. ⑦ in Model code / Replaced with "C" for Clean-room package



195

### **⚠ SAFETY Instructions**

This safety instructions aim to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370

ISO 4414: Pneumatic fluid power...Recomendations for the application of equipment to transmission and control systems.

JIS B 8370: General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.



Danger Hazardous conditions. It can cause death or serious personal injury.



Warning Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.



Products can cause personal injury or damages to properties.

### ↑ Warning I

- 1. Selection of pneumatic products
  - ① A user who is a pneumatic system designer or has sufficient experience and technical expertise should select PISCO products.
  - 2 Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.
- 2. Handle the pneumatic equipment with enough knowledge and experience
  - ① Improper use of compressed air is dangerous. Assembly, operation and maintenance of machines using pneumatic equipment should be conducted by a person with enough knowledge and experience.
- 3. Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.
  - ① Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
  - ② Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
  - ③ Restart the machines with care after ensuring to take all preventive measures against sudden movements.



### Disclaimer

- PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
- PISCO does not take any responsibility for any loss caused by natural disasters, fires not related to PISCO products, acts by third parties, and intentional or accidental damages of PISCO products due to incorrect usage.
- 3. PISCO does not take any responsibility for any loss caused by improper usage of PISCO products such as exceeding the specification limit or not following the usage the published instructions and catalog allow.
- PISCO does not take any responsibility for any loss caused by remodeling of PISCO products, or by combinational use with non-PISCO products and other software systems.
- 5. The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer.

# ⚠ SAFETY INSTRUCTION MANUAL

PISCO products are designed and manufactured for use in general industrial machines. Be sure to read and follow the instructions below.

### ∆ Danger ■

- 1. Do not use PISCO products for the following applications.
  - ① Equipment used for maintaining / handling human life and body.
  - 2 Equipment used for moving / transporting human.
  - 3 Equipment specifically used for safety purposes.

### 

- 1. Do not use PISCO products under the following conditions.
  - ① Beyond the specifications or conditions stated in the catalog, or the instructions.
  - ② Under the direct sunlight or outdoors.
  - ③ Excessive vibrations and impacts.
  - 4 Exposure / adhere to corrosive gas, inflammable gas, chemicals, seawater, water and vapor. \*
    - \* Some products can be used under the condition above(4), refer to the details of specification and condition of each product.
- 2. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
- 3. Turn off the power supply, stop the air supply to PISCO products, and make sure there is no residual air pressure in the pipes before maintenance and inspection.
- 4. Do not touch the release-ring of push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
- 5. Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
- 6. Avoid any load on PISCO products, such as a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
- 7. As for applications where threads or tubes swing / rotate, use Rotary Joints, High Rotary Joints or Multi-Circuit Rotary Block only. The other PISCO products can be damaged in these applications.
- 8. Use only Die Temperature Control Fitting Series, Tube Fitting Stainless SUS316 Series, Tube Fitting Stainless SUS316 Compression Fitting Series or Tube Fitting Brass Series under the condition of over 60°C (140° F) water or thermal oil. Other PISCO products can be damaged by heat and hydrolysis under the condition above.
- 9. As for the condition required to dissipate static electricity or provide an antistatic performance, use EG series fitting and antistatic products only, and do not use other PISCO products. There is a risk that static electricity can cause system defects or failures.
- 10. Use only Fittings with a characteristic of spatter-proof such as Antispatter or Brass series in a place where flame and weld spatter is produced. There is a risk of causing fire by sparks.
- 11. Turn off the power supply to PISCO products, and make sure there is no residual air pressure in the pipes and equipment before maintenance. Follow the instructions below in order to ensure safety.
  - $\ \, \bigcirc$  Make sure the safety of all systems related to PISCO products before maintenance.
  - ② Restart of operation after maintenance shall be proceeded with care after ensuring safety of the system by preventive measures against unexpected movements of machines and devices where pneumatic equipment is used.
  - ③ Keep enough space for maintenance when designing a circuit.
- 12. Take safety measures such as providing a protection cover if there is a risk of causing damages or fires on machine / facilities by a fluid leakage.



 $\pm$  0.15mm

 $\pm$  0.15mm

 $\pm$  0.15mm

± 0.15mm

 $\pm$  0.15mm

 $\pm$  0.15mm

 $\pm$  0.15mm

 $\pm$  0.15mm

 $\pm$  0.1mm  $\pm$  0.1mm

 $\pm$  0.1mm

 $\pm$  0.1mm

 $\pm$  0.1mm

 $\pm$  0.1mm

 $\pm$  0.1mm


 $\pm$  0.1mm


### 

- 1. Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
- 2. When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
- 3. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
- 4. Special option "Oil-free" products may cause a very small amount of a fluid leakage. When a fluid medium is liquid or the products are required to be used in harsh environments, contact us for further information.
- 5. In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.
  - Table 1. Tube O.D. Tolerance

mm size	Nylon tube	Polyurethane tube	inch size	
Ø1.8mm	_	$\pm$ 0.05mm	Ø1/8	
Ø3mm	_	± 0.15mm	Ø5/32	
Ø4mm	$\pm$ 0.1mm	± 0.15mm	Ø3/16	
Ø6mm	$\pm$ 0.1mm	± 0.15mm	Ø1/4	
Ø8mm	$\pm$ 0.1mm	± 0.15mm	Ø5/16	
Ø10mm	$\pm$ 0.1mm	± 0.15mm	Ø3/8	
Ø12mm	$\pm$ 0.1mm	± 0.15mm	Ø1/2	
Ø16mm	+ 0.1mm	± 0.15mm	Ø5/8	

- 6. Instructions for Tube Insertion
  - ① Make sure that the cut end surface of the tube is at right angle without a scratch on the surface and deformations
  - ② When inserting a tube, the tube needs to be inserted fully into the pushin fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

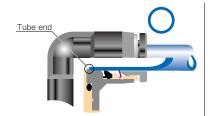

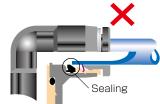

Tube is not fully inserted up to tube end.

- ③ After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
- \*\*. When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings;
  - (1) Shear drop of the lock-claws edge
  - ②The problem of tube diameter (usually small)

Therefore, follow the above instructions from 1 to 3, even lock-claws is hardly visible.

- 7. Instructions for Tube Disconnection
  - ① Make sure there is no air pressure inside of the tube, before disconnecting it.
  - ② Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the releasering, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.
- 8. Instructions for Installing a fitting
  - ① When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
  - ② Refer to Table 2 which shows the recommended tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket and cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage.
  - ③ Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.
  - Table 2: Recommended tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket materials
	M3 × 0.5	0.7N·m		0110004
	M5 × 0.8	1.0 ~ 1.5N·m		SUS304 NBR
	M6 × 1	2 ~ 2.7N·m		NDN
Metric thread	M3 × 0.5	0.5 ~ 0.6N·m	_	
	M5 × 0.8	1 ~ 1.5N·m		POM
	M6 × 0.75	0.8 ~ 1N·m		POM
	M8 × 0.75	1 ~ 2N·m		
	R1/8	7 ~ 9N·m		
Tanar pipe thread	R1/4	12 ~ 14N·m	White	
Taper pipe thread	R3/8	22 ~ 24N·m	vvnite	_
	R1/2	28 ~ 30N·m		
Unified thread	No.10-32UNF	1.0 ~ 1.5N·m	_	SUS304、NBR
	1/16-27NPT	7 ~ 9N·m		
Nietienel nine	1/8-27NPT	7 ~ 9N·m		
National pipe thread taper	1/4-18NPT	12 ~ 14N·m	White	_
	3/8-18NPT 22 ~ 24N·m			
	1/2-14NPT	28 ~ 30N·m		

- \* These values may differ for some products. Refer to each specification as well.
- 9. Instructions for removing a fitting
  - ① When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hex bolt.
  - ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.
- 10. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.

# ⚠ Common Safety Instructions for Fittings

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series as well as the instructions below.

### 

- Do not use fittings with fluid medium other than air or water. (Water can be used with some series.) Contact us for using other kind of fluid medium except air and water.
- 2. Do not use fittings except Anti-spatter, Brass and Brass Compression Fitting series in a place where the flame and weld spatter is produced. There is a risk of causing fire by sparks.
- 3. As for applications where threads or tubes swing / rotate, use Rotary Joints, High Rotary Joints or Multi-Circuit Rotary Block only. The other PISCO products can be damaged in these applications.
- 4. Use only Die Temperature Control Fitting Series, Tube Fitting Stainless SUS316 Series, Tube Fitting Stainless SUS316 Compression Fitting Series or Tube Fitting Brass Series under the condition of over 60°C (140° F) water or thermal oil. Other PISCO products can be damaged by heat and hydrolysis under the condition above.
- 5. As for the condition required to dissipate static electricity or provide an antistatic performance, use EG Series fitting and antistatic products only, and do not use other PISCO products. There is a risk that static electricity can cause system defects or failures.
- 6. Avoid any load on PISCO products, such as a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.

### ↑ Caution I

1.In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the following limits of Table 1.


### ■ Table 1. Tube O.D. Tolerance


mm size	Nylon tube	Urethane tube	
Ø1.8mm	_	$\pm$ 0.05mm	
Ø3mm	ー ± 0.15mm		
Ø4mm	$\pm$ 0.1mm	$\pm$ 0.15mm	
Ø6mm	± 0.1mm	$\pm$ 0.15mm	
Ø8mm	$\pm$ 0.1mm	$\pm$ 0.15mm	
Ø10mm	± 0.1mm	$\pm$ 0.15mm	
Ø12mm	± 0.1mm	± 0.15mm	
Ø16mm	+ 0.1mm	+ 0.15mm	

inch size	Nylon tube	Urethane tube	
Ø1/8	$\pm$ 0.1mm	$\pm$ 0.15mm	
Ø5/32	$\pm$ 0.1mm	$\pm$ 0.15mm	
Ø3/16	$\pm$ 0.1mm	± 0.15mm	
Ø1/4	$\pm$ 0.1mm	$\pm$ 0.15mm	
Ø5/16	$\pm$ 0.1mm	± 0.15mm	
Ø3/8	$\pm$ 0.1mm	$\pm$ 0.15mm	
Ø1/2	$\pm$ 0.1mm	$\pm$ 0.15mm	
Ø5/8	$\pm$ 0.1mm	± 0.15mm	

#### 2 Instructions for Tube Insertion

- ① Make sure that the cut end surface of the tube is at right angle without a scratch on the tube surface and deformations.
- ② When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

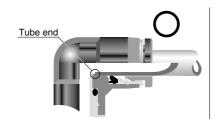

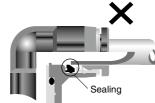

Tube is not fully inserted up to tube end.

- ③ After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
- 3. Instructions for Tube Disconnection
  - ① Make sure there is no air pressure inside of the tube, before disconnecting it.
  - ② Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.

- 4. Instructions for Installing a fitting
  - ① When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
  - ② Refer to Table 2 which shows the recommended tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket and cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage.
  - ③ Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable the installation.

● Table 2: Recommended tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket materials
Metric thread	$M3 \times 0.5$	0.7N·m		SUS304 NBR
	$M5 \times 0.8$	1.0 ~ 1.5N·m		
	$M6 \times 1$	2 ~ 2.7N·m	_	
	$M3 \times 0.5$	0.5 ~0.6N·m		РОМ
	$M5 \times 0.8$	1 ~1.5N·m		
	$M6 \times 0.75$	0.8 ~ 1N·m		
	$M8 \times 0.75$	1 ~ 2N·m		
Taper pipe thread	R1/8	7 ~ 9N·m	White	_
	R1/4	12 ~ 14N·m		
	R3/8	22 ~ 24N·m		
	R1/2	28 ~ 30N·m		
Unified thread	No.10-32UNF	1.0 ~ 1.5N·m	_	SUS304、NBR
National pipe thread taper	1/16-28NPT	7 ~ 9N·m		_
	1/8-27NPT	7 ~ 9N·m		
	1/4-18NPT	12 ~ 14N·m	White	
	3/8-18NPT	22 ~ 24N·m		
	1/2-14NPT	28 ~ 30N·m		

<sup>\*.</sup> These values may differ for some products. Refer to each specification as well

### 5.Instructions for removng a fitting

- When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hexagonal socket.
- ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.
- 6. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.