


Vacuum Pad for Resin Molded Product Vacuum Pad Soft Series

Soft and flexible pad leaves less mark on work-piece.

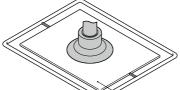

- Pad size : **8**sizes
- Pad material: **5**types
- Holder type: 1 Otypes (Standard).
 - 4types (Small)

Taking out resin molded products or fragile work-piece

- Various selections of pad size, pad material and holder type.

 Newly added pad materials for various types of work-piece.
 - Downsized holders (A, B, C and D type) are available for space-saving.

No need to detach a holder when replacing vacuum pad. Optional selection of Fall prevention valve and Vacuum Filter.


■ Vacuum pad holder VPHD and VPHE are dual port type.

Suitable for linking vacuum pads from a single vacuum source to convey work-pieces.

Variety of selections in pad holder for "Copper alloy free" and against "low ozone concentration".

No copper based metal parts, HNBR, and FKM are adopted for seal rubber.

■ Model Designation (Example)

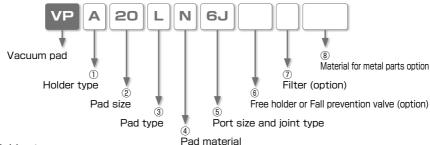

1. Holder type

). Holde	er type				
Standard	А	Standard	В	Standard Small	С
Standard Small	MA	Standard Small	MB	Small	MC
Type	Fixed type / Top port	Type	Fixed type / Side port	Type	Spring type / Top port
Standard Small	D	Standard Small	F	Standard Small	HC
					_
Type	Spring type / Side port	Type	Spring type / Direct mount	Туре	Spring type / Top port
Standard Small	HD	Standard Small	HDW	Standard Small	HE
	_				_
Type	Spring type / Side port	Type	Spring type / Dual port	Туре	Direct mount / Side port
Standard	HEW				
Standard Small	-				
Type	Direct mount / Dual port	1			

②. Pad size

Code	4	6	8	10	15	20	30	40
Dia. (mm)	ø4	ø6	ø8	ø10	ø15	ø20	ø30	ø40

standard Sorion

Sponge Series Bellows Series

Oval Series

3. Pad type

Code	L
Type	Soft

4). Pad material and application

Material	Nitrile rubber	Silicone rubber	Fluorosilicone rubber	Conductive Silicone rubber	Conductive NBR(Low resistance type)
Code	N	S	FS	SE	NE
Application	Cardboard	Semiconductors	Taking out molded parts	Semiconductors	Semiconductors
	Plywood	Taking out molded parts		Taking out molded parts	
	Iron plate	Thin work-pieces		Thin work-pieces	
	Food-related	Food-related		Food-related	
	Other general work-pieces				

- ※ 1. The Conductive Silicone rubber is a silicone rubber capable of releasing static electricity. (Volume resistance: Max. 10^sΩ·cm)
- ※ 2. The material of Conductive NBR (low resistance) is a nitrile rubber. (Volume resistance: Max. 200Ω·cm)
- * 3. Pad material N and NE are not suitable for use under ozone environment.

Port size and joint type

■ Standard type holder

Joint type	Push-ir	n fitting	Barb fitting		
Code	4J	6J	4B 6B		
O.D. x I.D.	ø4mm×ø2.5mm ø6mm×ø4mm		ø4mm×ø2.5mm	ø6mm×ø4mm	
Pad size	ø4mm ø6mm ~ ø40mm		ø4mm	ø6mm ~ ø40mm	

■ Small type holder

Joint type	Push-ir	n fitting		Barb fitting			
Code	3J	4J		3B	4	В	6B
O.D. x I.D.	ø3mm×ø2mm	ø4mm×ø2.5mm		ø3mm×ø2mm	ø4mm×ø2.5mm		ø6mm×ø4mm
Pad size	ø4mm ~ ø15i	nm ø20mm, ø30mm		ø4mm ~ ø15mm ø20		mm, ø30mm	

6. Free holder or Fall prevention valve (option)

Code	-FH	-FHH	-ECV
Option	Oscillating angle of free holder: 30°	Oscillating angle of free holder: 15°	Fall prevention valve
Applicable holder	VPA, VPB, VF	VPA, VPB, VPC, VPD, VPF, VPMA, VPMB	

^{*.} Free holder cannot be installed on small pad holder.

7. Filter (option)

Code	-F15	-F30	
Applicable holder	VPA, VPB, VPC, VPD), VPF, VPMA, VPMB	

®. Material option for metal parts

Code	No code	-S3
Material	Standard	Copper alloy free material

- * 1. Free holder, fall prevention valve and filter are not available when "-S3" is selected.
- ※ 2. "-S3" is not available for Push-in fitting size ø3mm with small pad holders.

657

★ Vacuum Pad Series

Vacuum Pad Soft Series

Suction Force

Regarding suction force of soft rubber vacuum pad, the calculated suction force (theoretical suction force x safety factor) may not be assured, due to the characteristics of vacuum pad, vacuum level, pad material and work-piece, etc. Select the proper item based on "Vacuum Pad Selection Guide (page 479)". Carry out any necessary evaluation with an actual system before approval.

⚠ Detailed Safety Instructions

Before using PISCO products, be sure to read "Safety Instructions" and "Common Safety Instructions for Products Listed in This Catalog on page 43-49, and "Common Safety Instructions for Vacuum Pad" on page 477-478.

Warning

- Since small vacuum pad holders are designed to be more lightweight than general holders, small type
 is inferior in load resistance. Secure an enough margin for a load setting and evaluate PISCO products
 with an actual system.
- 2. When replacing vacuum pad, refer to the structure of vacuum pad holder and pad, and tighten the screw with the described tightening torque in "Common Safety Instructions for Vacuum Pads" on page 477. Make sure that there is no looseness of the screw.
- 3. When installing bulkhead type pad holder, check the tightening torque for each holder and use proper tool to tighten the fixing nut. Make sure that there is no looseness of the nut. Excessive tightening of a fixing nut may deform the bulkhead part and result in malfunction of the keyway.

Caution

- 1. When using conductive vacuum pad, static electricity needs to be dissipated through a metal plate, etc., used to fix the holder. Also consider the conductivity when selecting the holder type. Otherwise, the static electricity remains on the vacuum pad. Some vacuum pad holders do not have conductivity.
- VPHC type holder does not have conductivity. When using a conductive vacuum pad, static electricity needs to be dissipated through the vacuum pad.
- 3. When using a conductive vacuum pad with a holder equipped with free holder or vacuum filter (optional parts), static electricity needs to be dissipated through the vacuum pad.

■ Applicable Tube and Related Products

Polyurethane Tube

(1. Piping products catalog P.596)

■ Polyurethane Tube is for general pneumatic piping and suitable for piping compactly.

Nylon Tube

(1. Piping products catalog P.608)

■ Nylon Tube is for general pneumatic piping and suitable for a high-pressure fluid medium up to 1.5MPa (NB tube: 1.0MPa).

Vacuum Tube

- (1. Piping products catalog P.612)
- Vacuum Tube is a ultra-soft tube and suitable for piping for vacuum generators or actuators.

Vacuum Generators · · · · P.52

Vacuum Filter Series · · · P.758


How to insert and disconnect

1. How to insert and disconnect tubes (Push-in fitting)

1) Tube insertion


Insert a tube into Push-in fitting up to the tube end. Lock-claws bite the tube and fix it automatically, then the elastic sleeve seals around the tube.

Refer to "7. Instructions for Tube Insertion" under "Common Safety Instructions for Products Listed in This Catalog".

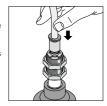

② Tube disconnection

The tube is disconnected by pushing release-ring to release Lock-claws. Make sure to stop air supply before the tube disconnection.

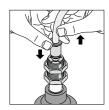

2. How to insert and disconnect tubes (Barb fitting)

① Tube insertion

Insert the barb into a tube up to the barb end. The outer shape of barb seals inside the tube. Use Tube Clamp Sleeve (**) to avoid the disconnection of tubes.



② Tube disconnection


Remove Tube Clamp Sleeve first, and pull the tube out.

* Refer to Minimal fitting on P.266



3. How to fix holder

In order to fix the vacuum pad holder, tighten the hexagonal nut with a spanner. Refer to the dimensional drawings for detail.

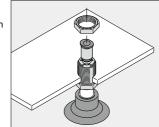



658

Series Skidproof Series

Flat Series





■ Standard Size List (Combinations with Standard Vacuum Pad Holder)

Fixed type / Top port / Push-in fitting

Fixed type / Side port / Push-in fitting

Type	Page	Pad	Port size
туре	raye	size	6mm
VPA		4mm	•
		6mm	•
	665	8mm	•
		10mm	•
		15mm	•
		20mm	•
		30mm	•
		40mm	•

Type	Page	Pad	Port size
Type	raye	size	6mm
VPB		4mm	•
		6mm	•
		8mm	•
	665	10mm	•
	665	15mm	•
		20mm	•
		30mm	•
		40mm	•

Spring type / Top port / Push-in fitting

Spring type / Side port / Push-in fitting

Type	Page	Pad	Port size
туре	rage	size	6mm
VPC		4mm	•
		6mm	•
		8mm	•
	666	10mm	•
	666	15mm	•
		20mm	•
		30mm	•
		40mm	•

Type	Page	Pad	Port size
туре	raye	size	6mm
VPD		4mm	•
		6mm	•
		8mm	•
	667	10mm	•
	007	15mm	•
		20mm	•
		30mm	•
		40mm	•

Spring type / Top port / Push-in fitting

Spring type / Side port / Push-in fitting

Туре	Dogg	Pad	Port size		
	Page	size	4mm	6mm	
/PHC		4mm	•		
		6mm		•	
		8mm		•	
	669	10mm		•	
	669	15mm		•	
		20mm		•	
		30mm		•	
		40mm		•	

Type	Page	Pad	Port size	
Type	raye	size	4mm	6mm
VPHD	0	4mm	•	
		6mm		•
	670	8mm		•
		10mm		•
		15mm		•
		20mm		•
		30mm		•
		40mm		•

Spring type / Dual port / Push-in fitting

Fixed type / Direct mount / Side port / Push-in fitting



Type	Page	Pad	Port	size
		size	4mm	6mm
VPHDW		4mm	•	
		6mm		•
		8mm		•
		10mm		•
		15mm		•
		20mm		•
		30mm		•
		40mm		•
	•			

Type	Page	Pad	Port size	
		size	4mm	6mm
VPHE		4mm	•	
		6mm		•
	074	8mm		•
		10mm		•
	671	15mm	•	
		20mm		•
		30mm		•
		40mm		•

VACU

659

Standard Series Sponge Series Bellows Series

Muti-Bellous Series Oval

Soft Series

Fixed type / Direct mount / Dual port / Push-in fitting



Туре	Page	Pad	Port size	
		size	4mm	6mm
VPHEW		4mm	•	
		6mm		•
		8mm		•
	074	10mm		•
	671	15mm		•
	2	20mm		•
		30mm		•
		40mm		•

Type	Dogo	Pad	Male thread size
Type	Page	size	M14×1mm
VPF		4mm	•
		6mm	•
		8mm	•
	668	10mm	•
	000	15mm	•
		20mm	•
		30mm	•
		40mm	

Fixed type / Top port / Barb fitting



Fixed type / Sid	port / Barb fitting
------------------	---------------------



Time	Dogo	Pad	Port size
Type	Page	size	6×4mm
VPA		4mm	•
		6mm	•
		8mm	•
	672	10mm	•
	6/2	15mm	•
		20mm	•
		30mm	•
		40mm	•

Time	Dogo	Pad	Port size
Type	Page	size	6×4mm
VPB	672	4mm	•
		6mm	•
		8mm	•
		10mm	•
	6/2	15mm	•
		20mm	•
		30mm	•
		40mm	•

Spring type / Top port / Barb fitting



Type	Page	rau	POIT SIZE
		size	6×4mm
VPC		4mm	•
		6mm	•
	673	8mm	•
		10mm	•
	6/3	15mm	•
		20mm	•
		30mm	•

40mm

Type	Pogo	Pad	Port size
туре	Page	size	6×4mm
VPD		4mm	•
		6mm	•
		8mm	•
	674	10mm	•
	0/4	15mm	•
		20mm	•
		30mm	•
		40mm	•

Spring type / Top port / Barb fitting





Type	Page	Fau	FULL	SIZE
	Page	size	4×2.5mm	6×4mm
VPHC		4mm	•	
		6mm		•
	675	8mm		•
		10mm		•
		15mm		•
		20mm		•
		30mm		•
		40mm		•
	•			

Туре	D	Pad	Port size			
	Page	size	4×2.5mm	6×4mm		
VPHD	675	4mm	•			
		6mm		•		
		8mm		•		
		10mm		•		
		15mm		•		
		20mm		•		
		30mm		•		
		40mm		•		

■ Standard Size List (Combinations with Standard Vacuum Pad Holder) |

Spring type / Dual port / Barb fitting

Fixed type / Direct mount / Side port / Barb fitting



Time	D	Pad	Port size		
Type	Page	size	4×2.5mm	6×4mm	
VPHDW	DW	4mm	•		
		6mm		•	
		8mm		•	
	676	10mm		•	
		15mm		•	
		20mm		•	
		30mm		•	
		40mm		•	

Type	Page	Pad	Port	size
Type	raye	size	4×2.5mm	6×4mm
VPHE		4mm	•	
		6mm		•
		8mm		•
	676	10mm		•
	0/0	15mm		•
		20mm		•
		30mm		•
		40mm		•

Fixed type / Direct mount / Dual port / Barb fitting


it / Daib litting	Vacuum rau nubber O
_	

Time	Dogo	Pad	Port size			
Type	Page	size	4×2.5mm	6×4mm		
VPHEW	4mm	•				
		6mm		•		
		8mm		•		
		10mm		•		
	677	15mm		•		
		20mm		•		
		30mm		•		
		40mm		•		

Type	Page	Pad	
туре	rage	size	
VP		4mm	•
		6mm	•
	664	8mm	•
		10mm	•
		15mm	•
		20mm	•
		30mm	•
		40mm	•

■ Standard Size List (Combinations with Small Vacuum Pad Holder)

Fixed type / Top port / Push-in fitting

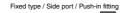



Туре	Page	Pad	Port size		
	raye	size	3mm	4mm	
VPMA		4mm	•	•	
		6mm	•	•	
		8mm	•	•	
	678	10mm	•	•	
		15mm	•	•	
		20mm		•	
		30mm		•	

Туре	Dogo	Pad	Port size		
	Page	size	3mm	4mm	
VPMB		4mm	•	•	
	679	6mm	•	•	
		8mm	•	•	
		10mm	•	•	
		15mm	•	•	
		20mm		•	
		30mm		•	

Fixed type / Top port / Barb fitting

Fixed type / Side port / Barb fitting



Timo	Page	Pau	POIT SIZE		
Type Page	size	3×2mm	4×2.5mm	6×4mm	
VPMA		4mm	•	•	
		6mm	•	•	
		8mm	•	•	
	680	10mm	•	•	
		15mm	•	•	
		20mm		•	•
		30mm		•	•

Type	D	Pad	Port size					
Type	Page	size	3×2mm	4×2.5mm	6×4mm			
VPMB		4mm	•	•				
		6mm	•	•				
	681	8mm	•	•				
		10mm	•	•				
		15mm	•	•				
		20mm		•	•			
		30mm		•	•			

VAC

Standard Series

Series

Bellows
Series

Muti-Belows
Series

Series Soft



■ Standard Size List (Combinations with Small Vacuum Pad Holder)

Spring type / Top port / Push-in fitting

Spring type / Side port / Push-in fitting

Type	Page	Pad	Port	size	
туре	raye	size	3mm	4mm	
VPMC		4mm	•	•	
		6mm	•	•	
		8mm	•	•	
	682	10mm	•	•	
		15mm	•	•	
		20mm		•	
		30mm		•	

Type	Page	Pad	Port size			
туре	raye	size	3mm	4mm		
VPMD		4mm	•	•		
		6mm	•	•		
		8mm	•	•		
	683	10mm	•	•		
		15mm	•	•		
		20mm		•		
		30mm		•		

Spring type / Top port / Barb fitting

Spring type / Side port / Barb fitting

Time	Dogo	Pau		POIT SIZE	
Type	Page	size	3×2mm	4×2.5mm	6×4mm
VPMC		4mm	•	•	
		6mm	•	•	
		8mm	•	•	
	684	10mm	•	•	
		15mm	•	•	
		20mm		•	•
		30mm		•	•

Time	Dogg	Pad	Port size					
Type	Page	size	3×2mm	4×2.5mm	6×4mm			
VPMD		4mm	•	•				
		6mm	•	•				
		8mm	•	•				
	685	10mm	•	•				
		15mm	•	•				
		20mm		•	•			
		30mm		•	•			

Soft Series

662

Series Skidproof Series

Flat Series

Mark-free Series


Cylinder

Pincette

■ Drawing of Vacuum Pad and Holder Joint

●VP4~15L□



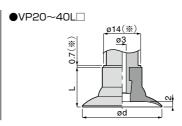

Unit: mm

Model code	Pad O.D. ød	L
VP 4L□	4	12.2
VP 6L□	6	12.2
VP 8L□	8	12.2
VP 10L□	10	14
VP 15L□	15	14
VP 20L□	20	15
VP 30L□	30	15
VP 40L□	40	15

Value with * is the dimension of VPHC holder.

■ Adapter Dimension


●VP4~15L□

PD M

Hex. 10

Society

**Graph of the control of th

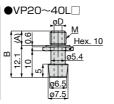

Unit: mm


Adapter Model code	øD	М	А	В	Weight (g)	Applicable pad	Thread size of applicable pad holder
FVPL15-M4	1.5	M4 × 0.7	3.9	10.5	2.8	VP4∼15L□	Thread size : M4
FVPL15-M6	3	M6 × 1	5.4	12	3	VP4∼15L□	Thread size : M6
FVPL40-M4	1.5	M4 × 0.7	5.4	17.5	3.9	VP20~40L□	Thread size : M4
FVPL40-M6	3	M6 × 1	5.4	17.5	3.8	VP20~40L□	Thread size : M6


*. Pad holder: VPA, VPB, VPC, VPD, VPF, VPMA, VPMB, VPMC, and VPMD require an adapter to attach a vacuum pad.


VACUL


Soft Series


■ Vacuum Pad Dimension

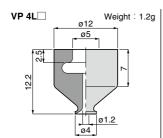


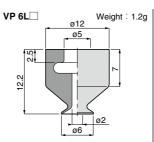


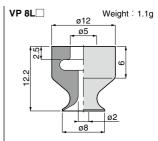


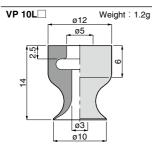

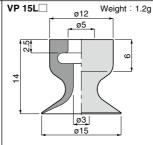

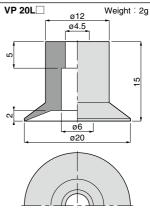

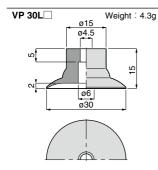

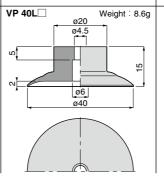

Soft Series

Skidproof Series

Flat Series

Series Long Stroke


Cylinder


VPA Fixed type / Top port / Push-in fitting







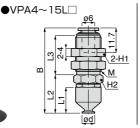

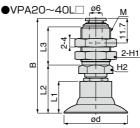

Unit: mm

Model	Pad O.D.	Thread	В	L1	L2	L3	Hex.	Hex.	Weight	CAD
code		M			LZ	Lo	H1	H2	(g)	file name
VPA4L46J8	4	M12×1	40.4[40.3]	12.2	18.3	18.5	14	12	9.5	
VPA6L46J8	6	M12×1	40.4[40.3]	12.2	18.3	18.5	14	12	16	
VPA8L46J8	8	M12×1	40.4[40.3]	12.2	18.3	18.5	14	12	16	
VPA10L46J8	10	M12×1	42.2[42.1]	14	20.1	18.5	14	12	25	Refer to PISCO
VPA15L46J8	15	M12×1	42.2[42.1]	14	20.1	18.5	14	12	25	website.
VPA20L46J8	20	M14×1	44.8[44.7]	15	22.7	18	17	14	41	Woboito.
VPA30L46J8	30	M14×1	44.8[44.7]	15	22.7	18	17	14	44	
VPA40L46J8	40	M14×1	44.8[44.7]	15	22.7	18	17	14	50	


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- * . Bulkhead nut tightening torque
- Pad dia. : Ø4 ~ Ø15mm ▶ 12 ~ 14N·m.
 Pad dia. : Ø20 ~ Ø40mm ▶ 18 ~ 21N·m.


Fixed type / Side port / Push-in fitting







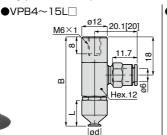

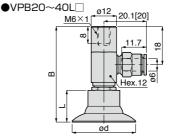

Unit: mm

Model code	Pad O.D. ød	В	L	Weight (g)	CAD file name
VPB4L46J8	4	42.3[42.2]	12.2	9	
VPB6L46J8	6	42.3[42.2]	12.2	17	
VPB8L46J8	8	42.3[42.2]	12.2	17	
VPB10L46J8	10	44.1[44]	14	34	Refer to PISCO
VPB15L46J8	15	44.1[44]	14	34	website.
VPB20L46J8	20	45.1[45]	15	38	
VPB30L46J8	30	45.1[45]	15	41	
VPB40L46J8	40	45.1[45]	15	48	

- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.


665









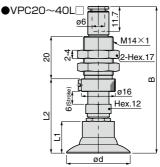

	٠.	
U	nit	mn


Model code	Pad O.D. ød	В	L1	L2	Spring force (N)	Weight (g)	CAD file name
VPC4L46J8	4	66.4[66.2]	12.2	32.3	4.0~7.1	21	
VPC6L46J8	6	66.4[66.2]	12.2	32.3	4.0~7.1	22	
VPC8L46J8	8	66.4[66.2]	12.2	32.3	4.0~7.1	22	5
VPC10L46J8	10	68.2(68)	14	34.1	4.0~7.1	39	Refer to PISCO
VPC15L46J8	15	68.2[68]	14	34.1	4.0~7.1	39	website.
VPC20L46J8	20	69.2[69]	15	35.1	7.0~12.6	44	Weberte.
VPC30L46J8	30	69.2[69]	15	35.1	7.0~12.6	47	
VPC40L46J8	40	69.2[69]	15	35.1	7.0~12.6	54	


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- $\ensuremath{\%}$. Bulkhead nut tightening torque : 4.5 \sim 6N·m

666

VPD Spring type / Side port / Push-in fitting



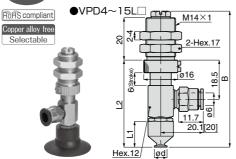

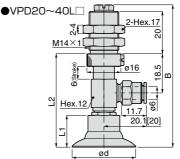

Unit: mm

Model code	Pad O.D. ød	В	L1	L2	Spring force (N)	Weight (g)	CAD file name
VPD4L46J8	4	64.4[64.2]	12.2	41.3	4.0~7.1	17	
VPD6L46J8	6	64.4[64.2]	12.2	41.3	4.0~7.1	19	
VPD8L46J8	8	64.4[64.2]	12.2	41.3	4.0~7.1	19	
VPD10L46J8	10	66.2[66]	14	43.1	4.0~7.1	51	Refer to PISCO
VPD15L46J8	15	66.2[66]	14	43.1	4.0~7.1	51	website.
VPD20L46J8	20	67.2[67]	15	44.1	7.0~12.6	56	Website.
VPD30L46J8	30	67.2[67]	15	44.1	7.0~12.6	59	
VPD40L46J8	40	67.2[67]	15	44.1	7.0~12.6	65	

* . Value in [] is the dimension of a "-S3" spec model.

* . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.

* . 8 : Replaced with "-S3" for "Copper alloy free".


* Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.

lepha . Bulkhead nut tightening torque : 4.5 \sim 6N·m


667


668



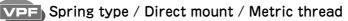



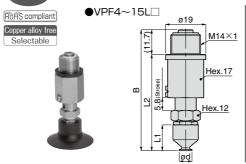

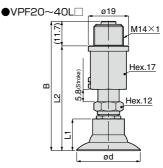


	٠.	
U	nit	mn


Model code	Pad O.D. ød	В	L1	L2	Spring force (N)	Weight (g)	CAD file name
VPF4L48	4	57.3[57.2]	12.2	45.6	7.9~15.0	18	
VPF6L48	6	57.3[57.2]	12.2	45.6	7.9~15.0	18	
VPF8L48	8	57.3[57.2]	12.2	45.6	7.9~15.0	18	5,.
VPF10L48	10	59.1[59]	14	47.4	7.9~15.0	59	Refer to PISCO
VPF15L48	15	59.1[59]	14	47.4	7.9~15.0	59	website.
VPF20L48	20	61.1[61]	15	49.4	7.9~15.0	63	Weberte.
VPF30L48	30	61.1[61]	15	49.4	7.9~15.0	66	
VPF40L48	40	61.1[61]	15	49.4	7.9~15.0	72	

- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- $\mbox{\%}$. Tightening torque for fixing a pad holder : 4.5 \sim 6N·m

VPHC Spring type / Top port / Push-in fitting



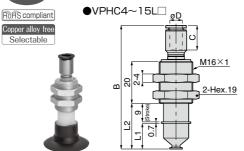

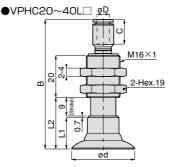

Unit: mm

Model code	Tube O.D. øD	Pad O.D. ød	В	L1	L2	С	Spring force (N)	Weight (g)	CAD file name
VPHC4L44J8	4		56.9[56.8]	12.2	21.9	10.9	0.9~2.7	20	The name
VPHC6L46J8	6	6	59.8[59.7]	12.2	21.9	11.7	0.9~2.7	22	
VPHC8L46J8	6	8	59.8[59.7]	12.2	21.9	11.7	0.9~2.7	22]
VPHC10L46J8	6	10	60.6[60.5]	14	23.7	11.7	0.9~2.7	22	Refer to PISCO
VPHC15L46J8	6	15	60.6[60.5]	14	23.7	11.7	0.9~2.7	22	website.
VPHC20L46J8	6	20	61.6[61.5]	15	24.7	11.7	0.9~2.7	23	WCDSILC.
VPHC30L46J8	6	30	61.6[61.5]	15	24.7	11.7	0.9~2.7	24	
VPHC40L46J8	6	40	61.6[61.5]	15	24.7	11.7	0.9~2.7	28	


- $\frak{\%}$. Value in [] is the dimension of a "-S3" spec model.
- ※. 4: Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- $\ensuremath{\%}$. Bulkhead nut tightening torque : 2 \sim 3N·m


669

VPHD Spring type / Side port / Push-in fitting





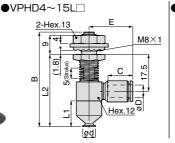

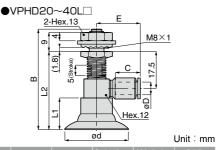


Veight	CAD	
(g)	file name	
30		
31		
31		
21	Refer to	


VPHD4L44J8 4 4 445 122 342 10.9 18.6[18.5] 1.6~2.9 44.5 12 2 34 2 11.7 VPHD6L46J8 6 6 20.5[20.4] $1.6 \sim 2.9$ VPHD8L46J8 6 8 44.5 12.2 34.2 11.7 20.5[20.4] 1.6~2.9 VPHD10L46J8 6 10 46.5 14 36 11.7 20.5[20.4] 1.6~2.9 **PISCO** 1.6~2.9 VPHD15L46J8 6 15 46.5 14 36 11.7 20.5[20.4] 31 website. VPHD20L46J8 6 47.5 15 37 11.7 20.5[20.4] 16~29 33 VPHD30L46J8 6 30 47.5 15 37 11.7 20.5[20.4] 1.6~2.9 35 VPHD40L46J8 6 40 47.5 15 37 11.7 20.5[20.4] 1.6~2.9 39

- ※ . Value in [] is the dimension of a "-S3" spec model.
- ※. 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- *. Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- ※ . Bulkhead nut tightening torque : 1.8 ~ 2.4N⋅m

VPHDW Spring type / Dual port / Push-in fitting



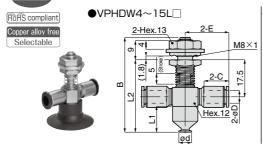

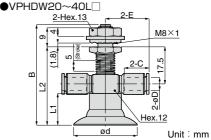

Model code	Tube O.D. øD	Pad O.D. ød	В	L1	L2	С	Е	Spring force (N)	Weight (g)	CAD file name
VPHDW4L44J8	4	4	44.5	12.2	34.2	10.9	18.6[18.5]	1.6~2.9	30	
VPHDW6L46J8	6	6	44.5	12.2	34.2	11.7	20.5[20.4]	1.6~2.9	31	
VPHDW8L46J8	6	8	44.5	12.2	34.2	11.7	20.5[20.4]	1.6~2.9	31	
VPHDW10L46J8	6	10	46.5	14	36	11.7	20.5[20.4]	1.6~2.9	31	
VPHDW15L46J8	6	15	46.5	14	36	11.7	20.5[20.4]	1.6~2.9	31	
VPHDW20L46J8	6	20	47.5	15	37	11.7	20.5[20.4]	1.6~2.9	33	
VPHDW30L46J8	6	30	47.5	15	37	11.7	20.5[20.4]	1.6~2.9	35	
VPHDW40I 46.18	6	40	47.5	15	37	11.7	20.5[20.4]	1.6~2.9	39	


- ※ . Value in [] is the dimension of a "-S3" spec model.
- ※. 4: Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- ※ . Bulkhead nut tightening torque : 1.8 ~ 2.4N⋅m




VPHE Fixed type / Direct mount / Side port / Push-in fitting





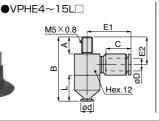

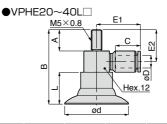

Unit: mm


ı	Model code	Tube U.D. øD	Pad O.D. ød				С	E1	E2	Weight (g)	file name
V	PHE4L44J8	4	4	8	30.2	12.2	10.9	18.6[18.5]	13	15	
٧	PHE6L46J8	6	6	8	30.2	12.2	11.7	20.5[20.4]	13	17	
٧	PHE8L46J8	6	8	8	30.2	12.2	11.7	20.5[20.4]	13	17	
٧	PHE10L46J8	6	10	8	32	14	11.7	20.5[20.4]	13	17	Refer to PISCO
٧	PHE15L46J8	6	15	8	32	14	11.7	20.5[20.4]	13	17	website.
٧	PHE20L46J8	6	20	10	35	15	11.7	20.5[20.4]	15	19	
٧	PHE30L46J8	6	30	10	35	15	11.7	20.5[20.4]	15	21	
٧	PHE40L46J8	6	40	10	35	15	11.7	20.5[20.4]	15	25	


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.

VPHEW Fixed type / Direct mount / Dual port / Push-in fitting





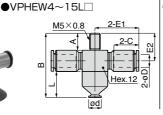

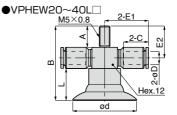


Unit: mm

Model code	Tube O.D. øD	Pad O.D. ød	А	В	L	С	E1	E2	Weight (g)	CAD file name
VPHEW4L44J8	4	4	8	30.2	12.2	10.9	18.6[18.5]	13	15	
VPHEW6L46J8	6	6	8	30.2	12.2	11.7	20.5[20.4]	13	17	
VPHEW8L46J8	6	8	8	30.2	12.2	11.7	20.5[20.4]	13	17	
VPHEW10L46J8	6	10	8	32	14	11.7	20.5[20.4]	13	17	
VPHEW15L46J8	6	15	8	32	14	11.7	20.5[20.4]	13	17	_
VPHEW20L46J8	6	20	10	35	15	11.7	20.5[20.4]	15	19	
VPHEW30L46J8	6	30	10	35	15	11.7	20.5[20.4]	15	21	
VPHEW40L46J8	6	40	10	35	15	11.7	20.5[20.4]	15	25	


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.


CAD



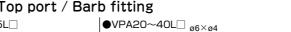



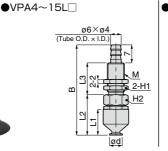

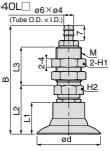

Unit: mm


Model code	Pad O.D. ød	Thread M	В	L1	L2	L3	Hex. H1	Hex. H2	Weight (g)	CAD file name
VPA4L46B8	4	M8×0.75	41.3	12.2	19.3	15	10	10	6.5	
VPA6L46B8	6	M8×0.75	41.3	12.2	19.3	15	10	10	11	
VPA8L46B8	8	M8×0.75	41.3	12.2	19.3	15	10	10	11	
VPA10L46B8	10	M8×0.75	43.1	14	21.1	15	10	10	15	Refer to PISCO
VPA15L46B8	15	M8×0.75	43.1	14	21.1	15	10	10	15	website.
VPA20L46B8	20	M12 × 1	51.1(50.9)	15	23.1	18	14	12	34	
VPA30L46B8	30	M12 × 1	51.1[50.9]	15	23.1	18	14	12	37	
VPA40L46B8	40	M12 × 1	51.1[50.9]	15	23.1	18	14	12	44	


- * . Value in [] is the dimension of a "-S3" spec model.
- ※. 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- * . Bulkhead nut tightening torque
 - Pad dia. : Ø4∼Ø15mm ▶ 2.5∼3.5N·m、 Pad dia. : Ø20∼Ø40mm ▶ 12∼14N·m

Fixed type / Side port / Barb fitting





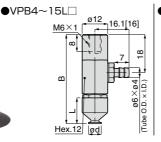

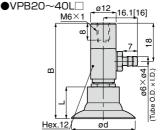

Unit: mm

Model code	Pad O.D. ød			Weight (g)	CAD file name
VPB4L46B8	4	42.3[42.2]	12.2	7.5	
VPB6L46B8	6	42.3[42.2]	12.2	15	
VPB8L46B8	8	42.3[42.2]	12.2	15	
VPB10L46B8	10	44.1[44]	14	32	Refer to PISCO
VPB15L46B8	15	44.1[44]	14	32	website.
VPB20L46B8	20	45.1[45]	15	36	
VPB30L46B8	30	45.1[45]	15	39	
VPB40L416B8	40	45.1[45]	15	46	

- ※ . Value in [] is the dimension of a "-S3" spec model.
- ※ . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.

Soft Belows

Ultrathin Series


Mark-free Series


Vacuum Cylinder

Air Pincette

VPC Spring type / Top port / Barb fitting



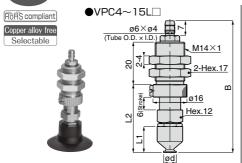

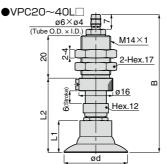

Unit: mm

Model code	Pad O.D. ød	В	L1	L2	Spring force (N)	Weight (g)	CAD file name
VPC4L46B8	4	62.4[62.2]	12.2	32.3	4.0~7.1	12	
VPC6L46B8	6	62.4[62.2]	12.2	32.3	4.0~7.1	12	
VPC8L46B8	8	62.4[62.2]	12.2	32.3	4.0~7.1	12	5,.
VPC10L46B8	10	64.2(64)	14	34.1	4.0~7.1	37	Refer to PISCO
VPC15L46B8	15	64.2[64]	14	34.1	4.0~7.1	37	website.
VPC20L46B8	20	65.2(65)	15	35.1	7.0~12.6	42	Website.
VPC30L46B8	30	65.2(65)	15	35.1	7.0~12.6	45	
VPC40L46B8	40	65.2[65]	15	35.1	7.0~12.6	51	

- $\frak{\%}$. Value in [] is the dimension of a "-S3" spec model.
- ※. 4: Replaced with Pad rubber material code. Refer to page 656 for details.
- ※ . 8 : Replaced with "-S3" for "Copper alloy free".
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- $\ensuremath{\text{\%}}$. Bulkhead nut tightening torque : 4.5 \sim 6N·m


673


674



PD Spring type / Side port / Barb fitting



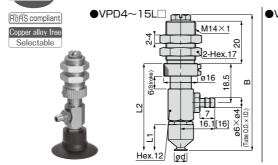

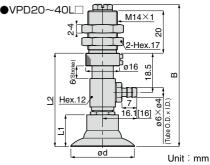


Model code	Pad O.D. ød	В	L1	L2	Spring force (N)	Weight (g)	CAD file name
VPD4L46B8	4	64.4[64.2]	12.2	41.3	4.0~7.1	16	
VPD6L46B8	6	64.4[64.2]	12.2	41.3	4.0~7.1	16	
VPD8L46B8	8	64.4[64.2]	12.2	41.3	4.0~7.1	16	
VPD10L46B8	10	66.2[66]	14	43.1	4.0~7.1	49	Refer to PISCO
VPD15L46B8	15	66.2[66]	14	43.1	4.0~7.1	49	website.
VPD20L46B8	20	67.2[67]	15	44.1	7.0~12.6	53	Website.
VPD30L46B8	30	67.2[67]	15	44.1	7.0~12.6	56	
VPD40L46B8	40	67.2[67]	15	44.1	7.0~12.6	63	


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- $\ensuremath{\%}$. Bulkhead nut tightening torque : 4.5 \sim 6N·m

VPHC Spring type / Top port / Barb fitting





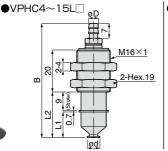

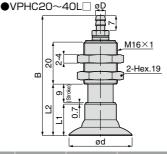

1 1 :4	
Unit	mm

Model		Pad O.D.	В	L1	L2	Spring force	Weight	CAD
code	øD		ь		LZ	(N)	(g)	file name
VPHC4L44B8	4 × 2.5	4	54.3[54.2]	12.2	21.9	0.9~2.7	18	
VPHC6L46B8	6 × 4	6	54.3[54.2]	12.2	21.9	0.9~2.7	20	
VPHC8L46B8	6 × 4	8	54.3[54.2]	12.2	21.9	0.9~2.7	20	D ()
VPHC10L46B8	6 × 4	10	56.1[56]	14	23.7	0.9~2.7	20	Refer to PISCO
VPHC15L46B8	6 × 4	15	56.1[56]	14	23.7	0.9~2.7	20	website.
VPHC20L46B8	6 × 4	20	57.1[57]	15	24.7	0.9~2.7	21	WODOILO.
VPHC30L46B8	6 × 4	30	57.1[57]	15	24.7	0.9~2.7	23	
VPHC40L46B8	6 × 4	40	57.1[57]	15	24.7	0.9~2.7	27	


- ※ . Value in [] is the dimension of a "-S3" spec model.
- ※. 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- ※ . Bulkhead nut tightening torque : 2~3N⋅m


PHD Spring type / Side port / Barb fitting





RoHS compliant

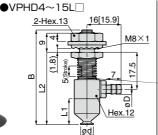

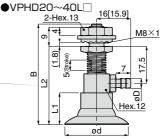

Unit: mm

Model code	Tube O.D. x I.D. ø D	Pad O.D. ød	В	L1	L2	Spring force (N)	Weight (g)	CAD file name
VPHD4L44B8	4 × 2.5	4	44.5	12.2	34.2	1.6~2.9	27	
VPHD6L46B8	6×4	6	44.5	12.2	34.2	1.6~2.9	30	
VPHD8L46B8	6 × 4	8	44.5	12.2	34.2	1.6~2.9	30	
VPHD10L46B8	6×4	10	46.5	14	36	1.6~2.9	30	Refer to PISCO
VPHD15L46B8	6 × 4	15	46.5	14	36	1.6~2.9	30	website.
VPHD20L46B8	6×4	20	47.5	15	37	1.6~2.9	32	website.
VPHD30L46B8	6×4	30	47.5	15	37	1.6~2.9	33	
VPHD40L46B8	6×4	40	47.5	15	37	1.6~2.9	37	

- * . Value in [] is the dimension of a "-S3" spec model.
- ※. 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- ※ . 8 : Replaced with "-S3" for "Copper alloy free".
- ※. Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- ※ . Bulkhead nut tightening torque : 1.8 ~ 2.4N⋅m

675

Soft Series


676



VPHDW Spring type / Dual port / Barb fitting



Unit: mm

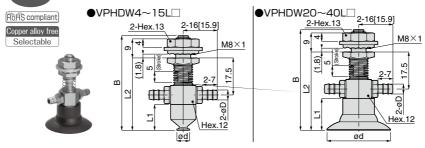


Pad O.D. VPHDW4L44B8 4×25 4 445 122 342 1.6~2.9 27 6 × 4 44 5 122 342 1.6~2.9 30 VPHDW6L46B8 6 VPHDW8L46B8 6×4 8 44.5 12.2 34.2 1.6~2.9 30 46.5 VPHDW10L46B8 6×4 14 36 $1.6 \sim 2.9$ 30 VPHDW15L46B8 6 × 4 15 46.5 14 36 $1.6 \sim 2.9$ 30 VPHDW20L46B8 6 × 4 47.5 15 37 1.6~2.9 32 VPHDW30L46B8 6×4 30 47.5 15 37 1.6~2.9 33 VPHDW40L46B8 6×4 40 47.5 15 37 $1.6 \sim 2.9$ 37


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- ※ . Bulkhead nut tightening torque : 1.8 ~ 2.4N·m

/PHE Fixed type / Direct mount / Side port / Barb fitting





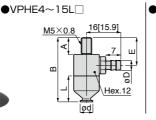

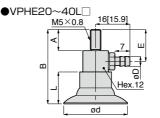

U	nit	:	mn

Model	Tube O.D. x I.D.	Pad O.D.	Α	В	L	Е	Weight	CAD
code	øD	ød					(g)	file name
VPHE4L44B8	4 × 2.5	4	8	30.2	12.2	13	13	
VPHE6L46B8	6 × 4	6	8	30.2	12.2	13	15	
VPHE8L46B8	6 × 4	8	8	30.2	12.2	13	15	
VPHE10L46B8	6×4	10	8	32	14	13	15	Refer to PISCO
VPHE15L46B8	6 × 4	15	8	32	14	13	15	website.
VPHE20L46B8	6 × 4	20	10	35	15	15	18	Website.
VPHE30L46B8	6×4	30	10	35	15	15	19	
VPHE40L46B8	6×4	40	10	35	15	15	23	


- * . Value in [] is the dimension of a "-S3" spec model.
- ※. 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- ※. Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.


VPHEW Fixed type / Direct mount / Dual port / Barb fitting







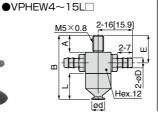

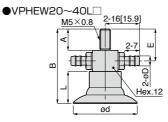

Unit: mm

Model code	Tube O.D. x I.D. ø D	Pad O.D. ød	А	В	L	Е	Weight (g)	CAD file name
VPHEW4L44B8	4 × 2.5	4	8	30.2	12.2	13	13	
VPHEW6L46B8	6×4	6	8	30.2	12.2	13	15	
VPHEW8L46B8	6 × 4	8	8	30.2	12.2	13	15	
VPHEW10L46B8	6×4	10	8	32	14	13	15	_
VPHEW15L46B8	6 × 4	15	8	32	14	13	15	
VPHEW20L46B8	6×4	20	10	35	15	15	18	
VPHEW30L46B8	6 × 4	30	10	35	15	15	19	
VPHEW40L46B8	6×4	40	10	35	15	15	23	

- * . Value in [] is the dimension of a "-S3" spec model.
- ※. 4: Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.





VPMA Fixed type / Top port / Push-in fitting







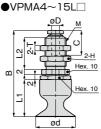

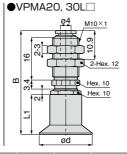

Unit: mm

Model code	Tube O.D.	Pad O.D.	Thread	В	L1	L2	С	Hex.		Weight	CAD
Model Code	øD	ød	М			LZ		Н		(g)	file name
VPMA4L43J	3	4	M8 × 0.75	30.9[30.8]	12.2	12	9.3	10	2	6.9	
VPMA4L44J8	4	4	M10 × 1	34.9[34.8]	12.2	16	10.9	12	3	8.7	
VPMA6L43J	3	6	M8 × 0.75	30.9[30.8]	12.2	12	9.3	10	2	6.9	
VPMA6L44J8	4	0	M10 × 1	34.9[34.8]	12.2	16	10.9	12	3	8.6	
VPMA8L43J	3	8	M8 × 0.75	30.9[30.8]	12.2	12	9.3	10	2	6.8	. .
VPMA8L44J8	4	0	M10 × 1	34.9[34.8]	12.2	16	10.9	12	3	8.5	Refer to PISCO
VPMA10L43J	3	10	M8 × 0.75	32.7[32.6]	14	12	9.3	10	2	6.8	website.
VPMA10L44J8	4	10	M10 × 1	36.7[36.6]	14	16	10.9	12	3	8.6	Woboito.
VPMA15L43J	3	15	M8 × 0.75	32.7[32.6]	14	12	9.3	10	2	6.9	
VPMA15L44J8	4	15	M10 × 1	36.7[36.6]	14	16	10.9	12	3	8.6	
VPMA20L44J8	_	20	_	39.1[39]	15	_	_	_	-	11	
VPMA30L44J8	_	30	_	39.1[39]	15	_	_	_	_	13	

- * . Value in [] is the dimension of a "-S3" spec model.
- ※. 4: Replaced with Pad rubber material code. Refer to page 656 for details.
- * . (8) : Replaced with "-S3" for "Copper alloy free" . This option is not available for holders with Tube O.D. Ø3mm.
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- * . Bulkhead nut tightening torque
 - Pad dia. : Ø4 ~ Ø15mm, Thread M : M8×0.75 ▶ 2.5 ~ 3.5N·m,
 Pad dia. : Ø4 ~ Ø15mm, Thread M : M10×1 ▶ 5 ~ 7N·m,
 - Pad dia. : Ø20 ~ Ø30mm ▶ 5 ~ 7N·m


678


VPME Fixed type / Side port / Push-in fitting







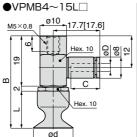

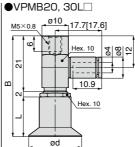

Unit: mm

Model code	Tube O.D. øD	Pad O.D. ød	В		С	Weight (g)	CAD file name
VPMB4L43J	3	4	33.2[33.1]	12.2	9.3	11	
VPMB4L44J8	4	4	33.2[33.1]	12.2	10.9	11	
VPMB6L43J	3	6	33.2[33.1]	12.2	9.3	11	
VPMB6L44J8	4	0	33.2[33.1]	12.2	10.9	11	
VPMB8L43J	3	8	33.2[33.1]	12.2	9.3	11	
VPMB8L44J8	4	0	33.2[33.1]	12.2	10.9	11	Refer to PISCO
VPMB10L43J	3	10	35[34.9]	14	9.3	11	website.
VPMB10L44J8	4	10	33[34.9]	14	10.9		***************************************
VPMB15L43J	3	15	35[34.9]	14	9.3	11	
VPMB15L44J8	4	15	33[34.9]	14	10.9	- 11	
VPMB20L44J8	_	20	38[37.9]	15	_	12	
VPMB30L44J8	_	30	38[37.9]	15	_	14	

* . Value in [] is the dimension of a "-S3" spec model.

- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . (8) : Replaced with "-S3" for "Copper alloy free". This option is not available for holders with Tube O.D. Ø3mm.
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.


CAD



VPMC Spring type / Top port / Push-in fitting






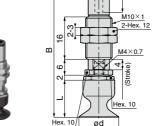

●VPMC4~15L□

øD



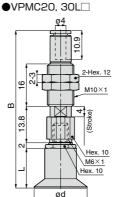

Unit: mm

Model code	Tube O.D.	Pad O.D.	В	L C		Spring force	Weight	CAD
Woder code	øD					(N)	(g)	file name
VPMC4L43J	3	4	46.8[46.6]	12.2	9.3	1 ~ 1.3	18	
VPMC4L44J8	4	4	48.9[48.7]	12.2	10.9	1 - 1.5	10	
VPMC6L43J	3	6	46.8[46.6]	12.2	9.3	1 ~ 1.3	18	
VPMC6L44J8	4	0	48.9[48.7]	12.2	10.9	1~1.5	10	
VPMC8L43J	3	8	46.8[46.6]	12.2	9.3	1 ~ 1.3	18	
VPMC8L44J8	4	0	48.9[48.7]	12.2	10.9	1~1.5	10	Refer to PISCO
VPMC10L43J	3	10	48.6[48.4]	14	9.3	1 ~ 1.3	18	website.
VPMC10L44J8	4	10	50.7(50.5)	14	10.9	1~1.5	10	Woboito.
VPMC15L43J	3	15	48.6[48.4]	14	9.3	1 ~ 1.3	18	
VPMC15L44J8	4	15	50.7(50.5)	14	10.9	1~1.5	10	
VPMC20L44J8	_	20	59.5[59.3]	15	-	1 ~ 1.3	23	
VPMC30L44J8	_	30	59.5[59.3]	15	-	1 ~ 1.3	25	


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . (8) : Replaced with "-S3" for "Copper alloy free". This option is not available for holders with Tube O.D. ø3mm.
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- ※ . Bulkhead nut tightening torque : 4 ~ 6N⋅m


VPMD Spring type / Side port / Push-in fitting







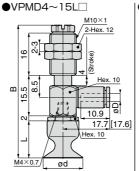

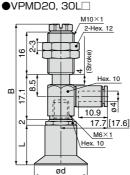

Unit: mm

Model code	Tube O.D. øD	Pad O.D. ød	В	L	Spring force (N)	Weight (g)	CAD file name
VPMD4L43J	3	4	48.7[48.5]	12.2	1 ~ 1.3	26	
VPMD4L44J8	4	7	40.7[40.5]	12.2	1 1.5	20	
VPMD6L43J	3	6	48.7[48.5]	12.2	1 ~ 1.3	26	
VPMD6L44J8	4	0	40.7[40.5]	12.2	1 - 1.5	20	
VPMD8L43J	3	8	48.7[48.5]	12.2	1 ~ 1.3	26	5
VPMD8L44J8	4	0	40.7[40.5]	12.2	1 1 1.5	20	Refer to PISCO
VPMD10L43J	3	10	50.5[50.3]	14	1 ~ 1.3	26	website.
VPMD10L44J8	4	10	50.5[50.5]	14	1 1 1.5	20	Wobonto.
VPMD15L43J	3	15	50.5[50.3]	14	1 ~ 1.3	26	
VPMD15L44J8	4	15	50.5[50.5]	14	1 1 1.5	20	
VPMD20L44J8	_	20	53.1[52.9]	15	1 ~ 1.3	27	
VPMD30L44J8	_	30	53.1[52.9]	15	1 ~ 1.3	28	

* . Value in [] is the dimension of a "-S3" spec model.

※. 4: Replaced with Pad rubber material code. Refer to page 656 for details.

* . (8) : Replaced with "-S3" for "Copper alloy free". This option is not available for holders with Tube O.D. Ø3mm.

* Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.

※ . Bulkhead nut tightening torque : 4 ~ 6N⋅m

681

Soft Series





VPMA Fixed type / Top port / Barb fitting







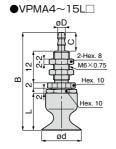

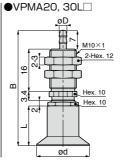

Unit: mm

Model code	Tube O.D. x I.D. øD	Pad O.D. ød	В	L	С	Weight (g)	CAD file name
VPMA4L43B8	3×2	4	34.2[34.1]	12.2	6	5.9	
VPMA4L44B8	4×2.5	4	35.2[35.1]	12.2	7	5.9	
VPMA6L43B8	3×2	6	34.2[34.1]	12.2	6	5.8	
VPMA6L44B8	4×2.5	ь	35.2[35.1]	12.2	7	0.0	
VPMA8L43B8	3×2	8	34.2[34.1]	12.2	6	5.8	
VPMA8L44B8	4×2.5	0	35.2[35.1]	12.2	7	5.7	5 ()
VPMA10L43B8	3×2	10	36[35.9]	14	6	5.8	Refer to
VPMA10L44B8	4×2.5	10	37[36.9]	14	7	5.0	PISCO website.
VPMA15L43B8	3×2	15	36[35.9]	14	6	5.8	Website.
VPMA15L44B8	4×2.5	15	37[36.9]	14	7	0.0	
VPMA20L44B8	4×2.5	20	43.4[43.3]	15	_	11	
VPMA20L46B8	6×4	20	43.4[43.3]	15		''	
VPMA30L44B8	4×2.5	30	43.4[43.3]	15	_	13	
VPMA30L46B8	6×4	30	40.4[40.0]	15		13	


- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- * . Bulkhead nut tightening torque
 - Pad dia. : Ø4∼Ø15mm ▶2∼3N·m、Pad dia. : Ø20∼Ø30mm ▶5∼7N·m


VPMB Fixed type / Side port / Barb fitting







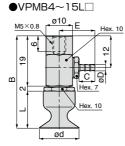

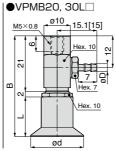

Unit: mm

Model code	Tube O.D. x I.D.	Pad O.D.	T B L L		Е	С	Weight	CAD
Model code	øD						(g)	file name
VPMB4L43B8	3×2	4	33.2[33.1]	12.2	13.6[13.5]	6	8.8	
VPMB4L44B8	4×2.5	4	33.2[33.1]	12.2	15.1[15]	7	9	
VPMB6L43B8	3×2	6	33.2[33.1]	12.2	13.6[13.5]	6	8.7	
VPMB6L44B8	4×2.5	0	33.2[33.1]	12.2	15.1[15]	7	8.9	
VPMB8L43B8	3×2	8	33.2[33.1]	12.2	13.6[13.5]	6	8.7	
VPMB8L44B8	4×2.5	0	33.2[33.1]	12.2	15.1[15]	7	8.8	5 ()
VPMB10L43B8	3×2	10	35[34.9]	14	13.6[13.5]	6	8.7	Refer to PISCO
VPMB10L44B8	4×2.5	10	33[34.9]	14	15.1[15]	7	8.9	website.
VPMB15L43B8	3×2	15	35[34.9]	14	13.6[13.5]	6	8.7	woboito.
VPMB15L44B8	4×2.5	15	35[34.9]	14	15.1[15]	7	8.9	
VPMB20L44B8	4×2.5	20	38[37.9]	15	_	_	11	
VPMB20L46B8	6×4	20	30[37.9]	15			11	
VPMB30L44B8	4×2.5	20	38[37.9]	15			13	
VPMB30L46B8	6×4	30	30[37.9]	15		1	10	

* . Value in [] is the dimension of a "-S3" spec model.

* . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.

* . 8 : Replaced with "-S3" for "Copper alloy free".

* Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.

683





VPMC Spring type / Top port / Barb fitting







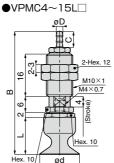

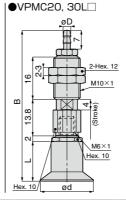

Unit	
Uffil	mm

Model code	Tube O.D. x I.D. øD	Pad O.D. ød	В	L	С	Spring force (N)	Weight (g)	CAD file name
VPMC4L43B8	3×2		44.8[44.6]	12.2	6	1 ~ 1.3	17	Refer to PISCO website.
VPMC4L44B8	4×2.5	4	46.3[46.1]		7			
VPMC6L43B8	3×2	6	44.8[44.6]	12.2	6	1 ~ 1.3	17	
VPMC6L44B8	4×2.5	6	46.3[46.1]		7			
VPMC8L43B8	3×2	8	44.8[44.6]	12.2	6	1 ~ 1.3	16	
VPMC8L44B8	4×2.5	0	46.3[46.1]		7		17	
VPMC10L43B8	3×2	10	46.6[46.4]	14	6	1 ~ 1.3	17	
VPMC10L44B8	4×2.5	10	48.1[47.9]		7			
VPMC15L43B8	3×2	15	46.6[46.4]	<u>-</u> - 14	6	1 ~ 1.3	17	
VPMC15L44B8	4×2.5	15	48.1[47.9]		7			
VPMC20L44B8	4×2.5	20	56.9[56.7]	15	_	1 ~ 1.3	22	
VPMC20L46B8	6×4	20						
VPMC30L44B8	4×2.5	30	56.9[56.7]	15	_	1 ~ 1.3	24	
VPMC30L46B8	6×4	30						

- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- * . 8 : Replaced with "-S3" for "Copper alloy free".
- * Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- lepha . Bulkhead nut tightening torque : 4 \sim 6N·m





VPMD Spring type / Side port / Barb fitting







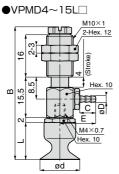

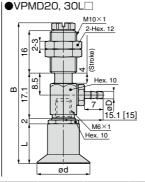

Unit: mm

Model code	Tube O.D. x I.D. Ø D	Pad O.D. ød				С	Spring force (N)	Weight (g)	CAD file name
VPMD4L43B8	3×2	4	48.7[48.5]	12.2	13.6[13.5]	6	1 ~ 1.3	24	Refer to PISCO website.
VPMD4L44B8	4×2.5				15.1(15)	7			
VPMD6L43B8	3×2	6	48.7[48.5]	12.2	13.6[13.5]	6	1 ~ 1.3	24	
VPMD6L44B8	4×2.5				15.1[15]	7			
VPMD8L43B8	3×2	8	48.7[48.5]	12.2	13.6[13.5]	6	1 ~ 1.3	24	
VPMD8L44B8	4×2.5				15.1[15]	7			
VPMD10L43B8	3×2	10	50.5[50.3]	14	13.6[13.5]	6	1 ~ 1.3	24	
VPMD10L44B8	4×2.5				15.1[15]	7			
VPMD15L43B8	3×2	15	50.5[50.3]	14	13.6[13.5]	6	1 ~ 1.3	24	
VPMD15L44B8	4×2.5				15.1[15]	7			
$VPMD20L\underline{4}4B\underline{8}$	4×2.5	20	53.1[52.9]	15	-	-	1 ~ 1.3	26	
VPMD20L46B8	6×4								
VPMD30L44B8	4×2.5	30	53.1[52.9]	15	-	_	1 ~ 1.3	27	
VPMD30L46B8	6×4								

- * . Value in [] is the dimension of a "-S3" spec model.
- * . 4 : Replaced with Pad rubber material code. Refer to page 656 for details.
- $\ensuremath{\%}$. $\ensuremath{\mathbb{8}}$: Replaced with "-S3" for "Copper alloy free".
- * . Nitrile rubber (N) and Conductive NBR (Low resistance) (NE) are not suitable for measures against ozone.
- ※ . Bulkhead nut tightening torque : 4 ~ 6N⋅m

Soft Series

685



686

Soft Series

Series Skidproot

Series


Flat Series

Mark-free Series

Long Stroke Series

Air

■ Construction (Combinations with Standard Vacuum Pad Holder) |

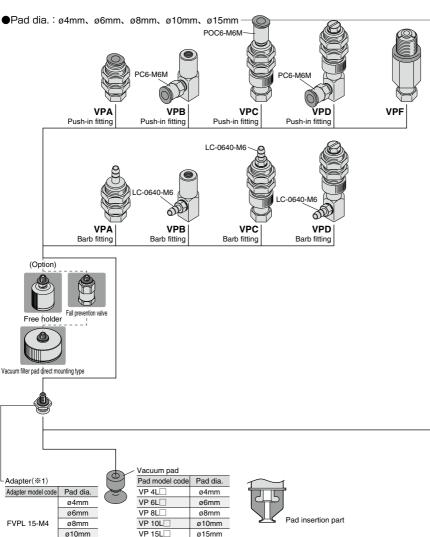

- *1. Adapter is for connecting between a holder and a vacuum pad. When a vacuum pad ø4, 6, 8, 10 or 15mm is attached to a holder (VPA, VPB, VPC, VPD or VPF) and the pad fixing screw of the holder side is female screw size M6×1, adapter model code: "FVPL15-M6" is required.
- *2. The Fitting model code for option "-S3" (copper alloy free and against low ozone concentration) is different from that of standard products. Contact us for details.
- *3. Holder alone is purchasable by the following model code.

Model code: VP 10R()6J/6B (for VPA ~ VPF holder)

Model code: VPH 10L() 3J/3B (for VPHC ~ VPHEW holder)

① : Holder type, ③ : Port size

ø15mm

687

Soft Series









Push-in fitting



VPHDW Push-in fitting



Push-in fitting



Push-in fitting

*.Holder type VPHC, VPHD and VPHE Push-in fitting POC4-M5M (Tube dia. ø4mm) for pad dia. ø4mm holder. Push-in fitting POC6-M5M (Tube dia. ø6mm) for pad dia. ø6-15mm holder.















Barb fitting



VPHEW Barb fitting


 $\frak{\%}$.Holder type VPHC, VPHD and VPHE Barb fitting LC-0425-M5 (Tube O.D. ø4mm x I.D. ø2.5mm) for pad dia. ø4mm holder. Barb fitting LC-0640-M5 (Tube O.D. ø6mm x I.D. ø4.0mm) for pad dia. ø6-15mm holder.









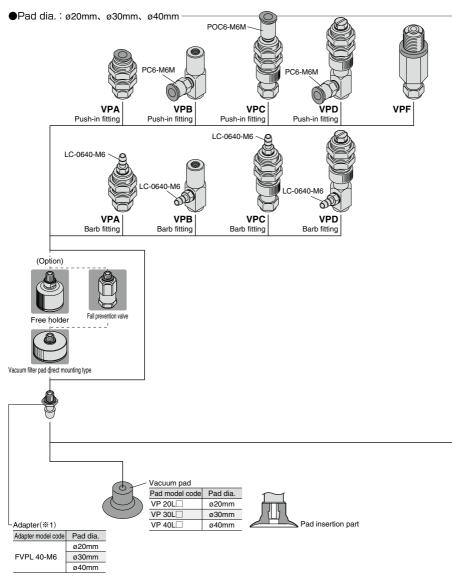

- *1. Adapter is for connecting between a holder and a vacuum pad. When a vacuum pad ø20, 30 and 40mm is attached to a holder (VPA, VPB, VPC, VPD or VPF) and the pad fixing screw of the holder side is female screw size M4×0.7, adapter model code: "FVPL40-M4" is required.
- **2. The Fitting model code for option "-S3" (copper alloy free and against low ozone concentration) is different from that of standard products. Contact us for details.
- ※3. Holder alone is purchasable by the following model code.

Model code: VP①20R()6J/6B (for VPA ~ VPF holder)

Model code : VPH@20L()@J/@B (for VPHC \sim VPHEW holder)

① : Holder type, ③ : Port size













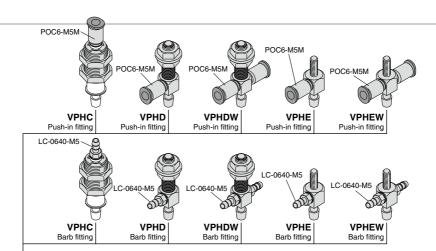

Vacuum Pad Soft Series

■ Construction (Combinations with Small Vacuum Pad Holder)


●Pad dia.: ø4mm、ø6mm、ø8mm、ø10mm、ø15mm

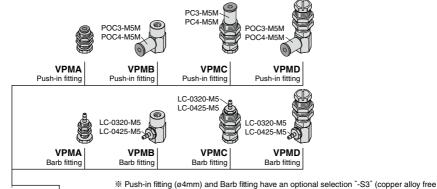

(Option) and against low ozone concentration). The Fitting model code for option "-S3" is different from that of standard products. Contact us for details. ※ Holder alone is purchasable by the following model code. Model code: VPM 10R() 3J/3B ① : Holder type, ③ : Port size

Vacuum filter pad direct mounting type

Fall prevention valve

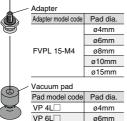






691

Series

●Pad dia.: ø20mm、ø30mm

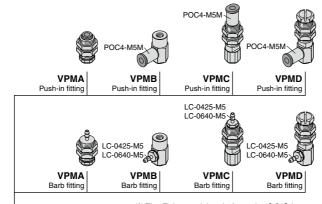


** The Fitting model code for option "-S3" (copper alloy free and against low ozone concentration) is different from that of standard products. Contact us for details.

** Holder alone is purchasable by the following model code. Model code: VPM①20R()4J/③B

① : Holder type, : Port size





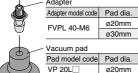

VP 30L□

ø30mm











Pincette

693

Standard Series

Sponge Series

Series

Multi-Bellows Series

Oval Series

Soft Series

^

Common Safety Instructions for Vacuum Pads

Before selecting or using PISCO products, read following instructions. Read the detailed instruction for individual series as the instructions below.

⚠ Warning

- 1. Take safety measures in advance where a dropping work-piece can cause danger.
- 2. Make sure to install a vacuum pad holder securely. Looseness may cause trouble.
- 3. Pay special attention to the work conveyance by screwed vacuum pads, accompanied by rotary movement. There is a possibility of troubles due to the looseness of screws from the rotary movement.
- 4. There is a possibility of troubles due to the leakage of vacuum system, clogging, vacuum pad abrasion, crack, deterioration, the galling of slider part in the holder and the looseness in joints. Carry out maintenance inspection periodically.
- 5. When a work-piece is conveyed by a vacuum pad, consider the acceleration, impacts and wind pressure. Otherwise, the work-piece may drop during conveyance.

- 1. Thoroughly read and understand the theoretical suction force in this catalog before selecting diameter, Qty and suction place of vacuum pads. Select vacuum pads with enough margin in suction force.
- 2. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
- 3. Select the material of vacuum pad in accordance with use environment and ease of use, referring to "Vacuum Pad Selection Guide".
- 4. Select the suitable pad shape (type) in accordance with a work-piece and its shape, referring to "Vacuum Pad Selection Guide".
- Select spring-holder type when work-pieces have different heights or are weak against an
 external force. Select the suitable holder type, referring to spring force and spring length in
 the catalog.
- 6. Since spring-holder type has a sliding action, minimize the transverse load. Otherwise, the life time of the holder can be reduced or malfunction of the holder can occur.
- 7. In replacing vacuum pads, check the structure of holders and pads in the catalog and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.
 - Table. Tightening torque

Vacuum pad holder	Standard	Small					
Pad screw size (mm)	Tightening torque (N⋅m)						
M4×0.7	0.5 ~ 1.0	0.9 ~ 1.1					
M6×1	2 ~	2.7					
M10×1.5	5 ~ 7	-					
M20×2	9 ~ 10	-					

- 8. In replacing the adapters of Soft / Soft Bellows Series, check the structure of holders, pad and adapters and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.
 - Table. Tightening torque

Pad screw size (mm)	Tightening torque (N⋅m)
M4×0.7	0.7 ~ 0.8
M6×1	1.5 ~ 2.0

Flat Series

Mark-free Series

Vacuum Cylinder

9. In installing vacuum pad holders of general and small type with bulkhead, check the structure and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

Vacuum pad holder		Standard			Small	
Holder type	VPA	VPC, VPD, VPF, VPHC, VPHD, VPHDW	VPE	VPMA	VPMC, VPMD	VPME
Bulkhead nut size (mm)			Tightening to	orque (N·m)		
M3×0.5	_	_	0.7	_	_	0.7
M4×0.5	_	_	_	1 ~ 1.2	_	
M4×0.7	1 ~ 1.2	_	_	_	_	_
M5×0.5	1.5 ~ 2	_	_	1.5 ~ 2	_	_
M5×0.8	_	_	1 ~ 1.5	_	_	1 ~ 1.5
M6×0.75	2 ~ 3	_	_	2 -	- 3	_
M8×0.75	2.5 ~ 3.5	1.8 ~ 2.4	_	2.5 -	~ 3.5	_
M8×1	_	1.8 ~ 2.4	_	_	_	_
M10×1	5 ~ 7	4.5 ~ 6	_	5 ~ 7	4 ~ 6	_
M12×1	12 ~ 14	8 ~ 10	_	_	_	_
M14×1	18 ~ 21	4.5 ~ 6	_	_	_	_
M16×1	_	2 ~ 3		_	_	
M20×1	19 ~ 21	_	_	_	_	_
M22×1	_	16 ~ 20	_	_	_	_
M24×2	40 ~ 50	_	_	_	_	_
M30×2	_	42 ~ 54	_	_	_	_

- 10. In replacing vacuum pad rubbers of Standard Series ø80, ø100mm, ø150mm, ø200mm and Bellows Series ø80mm, ø100mm, check the structure of holders and pads and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.
 - Table. Tightening torque


Screw size (mm)	Tightening torque (N⋅m)
M4×0.7	0.5 ~ 0.7
M5×0.8	0.5 ~ 0.7

- 11. Check the structure of vacuum pad in the catalog before replacing a filter element.
- 12. Refer to "Common Safety Instructions for Fittings" for handing fitting joint parts.
- 13. In installing spring-holder type, do not hold the shaft A with a spanner. In replacing vacuum pad, hold the hexagonal-column of the shaft with a spanner. If the keyway B is deformed, there is a possibility of malfunction.
- 14. Excessive tightening of a fixing nut may deform the bulkhead part and result in malfunction of the keyway.
- 15. As the nature of rubber, powdery component like additives may come out on the surface of a vacuum pad as time elapses.

Vacuum Pad Selection Guide

Selection Guide 1 > Select the diameter of vacuum pad from the formula (1) and chart of the theoretical suction force (2)

The theoretical suction force is determined from pad area and vacuum level. Calculated value is for reference only, so carry out the evaluation under an actual operating condition. The theoretical suction force is calculated under a static condition. Obtain an enough margin, considering the weight of a work-piece and acceleration of lifting, pause and rotary movement. Enough room is needed in deciding a number of pads and arrangement position.

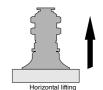

(1) Calculation by formula -


$$W = \frac{C \times P}{101} \times 10.13 \times f$$


- W: Suction force (N)
- C: Pad area (cm²)
 - Vacuum level (-kPa)
- f : Safety factor Horizontal lifting (refer to the right fig.) ▶ 1/4 Vertical lifting (refer to the right fig.) ▶ 1/8
- *1. Refer to the following chart for Sponge Series.(Internal diameter is used for calculation)
- *2. Refer to the following chart for Flat Series.(Pad grooves are used for calculation)
- *3. As for Bellows, Multi-Bellows, Soft, Soft Bellows and Ultrathin Series, their theoretical suction force may exceed the strength of pad itself, depending on the vacuum level. Carry out the evaluation under an actual operating condition.


Vertical lifting


② Chart of the theoretical suction force 〈Add safety factor to values from the chart〉


Standard / Bellows / Multi-bellows / Soft / Soft bellows / Skidproof / Ultrathin / Mark-free (*)

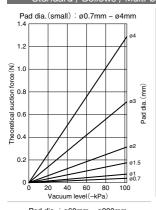

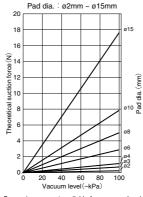

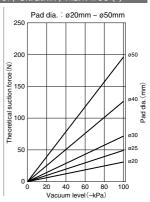

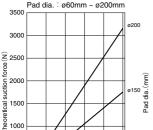


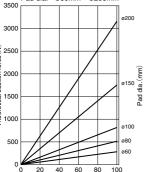


Vacuum level (-kPa)


*	Cama	01700	are not	available	for come	2000	aariaa	Dofor	to the	following	0170	liot.

F	ad type	Standard	Bellows	Multi-bellows	Soft	Soft bellows	Skidproof	Ultrathin	Mark-free
	ø0.7~ø3	•	_		_	_	_	_	_
	ø4	•	_	_	•	_	_	_	_
	ø6	•	•	_	•	•	_	_	_
	ø8	•	•	_	•	•	_	•	_
	ø10	•	•	•	•	•	•	•	•
	ø15	•	•	_	•	•	_	•	_
Pad	ø20	•	•	•	•	•	•	•	•
d dia.	ø25	•	•	_	_	_	_	_	_
я С	ø30	•	•	•	•	_	•	_	•
(mm)	ø40	•	•	•	•	_	•	_	_
	ø50	•	•	•	_	_	•	_	_
	ø60	•	•	_	_	_	_	_	_
	ø80	•	•	_	_	_	_	_	_
	ø100	•	•	_	_	_	_	_	_
	ø150	•	_	_	_	_	_	_	_
	ø200	•	_	_	_	_	_	_	_

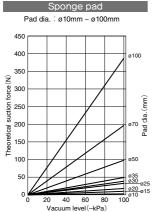

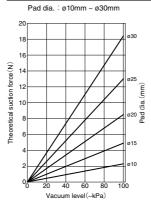


Flat pad

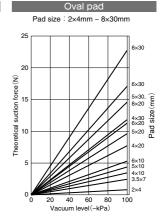

Selection Guide 2 ▶ Select a vacuum pad type according to a work-piece


Please select suitable pads for your application from the following.

	Standard Serie	s	Bellows / Multi-bellows Series
	Deep	Small type	
Thick & flat work-piece	Round fruit or ball (*1) Small work-piece or semiconductor product	Food package
	Sponge Series	3	Oval Series
Exterio	or wall panel, pebble	, seashell	Long work-piece (e.g. circuit board and semiconductor product)
Soft / Soft bellows	Series	Skidproof Series	Mark-free Series
Molded parts / Fragile w	vork-piece Greasy parts	work-piece such as pressed	LCD glass / in Painting process / semiconductor
	Ultrathin Serie	S	Flat Series
Thin work-p	piece such as paper	or plastic bag	Thin work-piece such as sheet or plastic bag

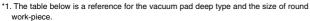

Spherical dia : S(mm)	ø20	ø30	ø40	ø50	ø80	ø100	ø120	ø160	ø200
Pad dia. ∶ d(mm)	ø15	ø20	ø25	ø30	ø40	ø50	ø60	ø80	ø100

*2. Refer to the previous page for pad dia. selection except deep type. Refer to the next page for the characteristics of pad materials.

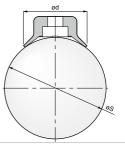

Selection Guide 3 ▶ Select a vacuum pad material from an application

Please select the suitable material from the table.

Ite	m	Pad material	Nitrile rubber	NBR Suited for the food sanitation act. (Japan)	HNBR	Silicone rubber	Conductive Silicone rubber	Urethane rubber	Fluoro rubber	Fluorosilicone rubber	EPDM	Conductive Butadiene rubber (Low resistance type)	Conductive NBR (low resistance)	Chloroprene rubber (For Sponge type)	Silicone rubber (For Sponge Type)
		Material code	N, NH(*1)	G	HN	S	SE	U	F	FS	EP	E	NE	-	S
			Card	board	Cardboard	Semico	nductors	Cardboard	Chemical	Taking out	Application	General	Semiconductors	Uneven	Uneven
			Plyv	vood	Plywood	Takin	g out	Plywood	environment	molded	that requires	parts of		work-	work-
			Metal	plate	Metal plate	molde	d parts	Metal	High temp.	parts	light-resistant	semiconductors		piece	piece
			Food-	related	Food-related	Thin wo	rk-piece	plate	work-pieces		or ozone-				Food-
۸.,	plication		Other	general	Other	Food-	related				proof In use				related
Aμ	plication		wo	ork	general work						under in the				
					In use under						moisture-				
					a low ozone						containing				
					concentration						atmosphere				
					environment										
Pa	d color		Black	Gray	Black	Translucent	Black	Blue	Gray	Salmon	Black	Black	Black	Black	Salmon
		Standard	50°~80°	60°~70°	50°~70°	50°	60°	55°~70°	60°~70°	_	50°~70°	70°	60°~70°	_	_
		Bellows	50°	_	50°	50°	60°	55°	60°	_	50°	_	60°	_	_
		Multi-bellows	50°	50°	50°	50°	_	55°	50°	_	50°	_	60°	_	_
	Surface	Oval	40°~50°	-	50°	40°~50°	50°~60°	55°(*2)	50°(*2)	-	50°	70°	70°	-	-
	hardness	Soft	40°	-	_	40°	60°	_	_	40°	_	_	50°	_	_
	(Shore A)	Soft bellows	40°	_	50°	40°	_	55°	_	_	50°	_	60°	_	_
. P		Skidproof	50°	-	_	50°	-	55°	60°	-	-	-	60°	-	-
/sic		Ultrathin	40°	-	_	40°	_	55°	50°	40°	-	-	60°	-	_
Physical Properties		Flat	60°	_	_	40°	40°	50°	50°	-	-	-	60°	-	_
op.		perating temp.		D,C	140°C		D°C	60°C	230°C	180°C	150°C	100°C	110°C	80°C	180°C
enti-		erating temp.	-)°C	-30°C)°C	-20°C	-10°C	-50°C	-40°C	-50°C	-30°C	-45°C	-40°C
Se	Weathera				0			0	0	0	0	0	\triangle	0	0
	Ozone-pro			<	0	(0	0	0	0	×	×	0	0
	Acid-resis				\triangle	(×	0	0	0	\triangle	\triangle	\triangle	0
	Alkaline-re				0	(×	×	0	0	0	0	0	0
	Oil	(Gasoline oil)			0			0	0	Δ	×	×	0	×	Δ
		(Benzene/toluene)	-		×			\triangle	0	\triangle	×	×	Δ	\triangle	\triangle
	Volume re	sistance	-	_	_	_	Max.10 ⁵ Ω·cm	_	_	_	_	Max.200Ω-cm	Max.200Ω-cm	_	_

○ : Suitable \triangle : Good ×:NG

*1. Material code "NH" is only applicable to Skidproof Series.

*2. It does not apply to pad size: 4×30 mm.

Note 1) The above "Physical Properties" shows the data of general synthetic rubbers.

Note 2) The highest / lowest operating temp. are for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.

Please select the suitable vacuum pad resin material from the table

10000 00	loot	the suitable vasaam	pad resilt material ii	on the table.			
		Pad material	PEEK	POM	Conductive PEEK		
Item	Material	Mark free series	К	M	KE		
	code	Resin attachment for Bellows series	-QK	-QM	-QKE		
			Semiconductor/	General production line	Semiconductors/		
			Manufacturing machine for	Food-related machine	Manufacturing machine for		
pplication			liquid crystal	Packaging machine	liquid crystal		
					Electronic components		
Pad color			Natural (ivory)	White	Black		
Highest op	Highest operating temp.		erating temp.		250°C	95°C	250°C
및 Lowest op	erating	temp.	-50°C	-60°C	-50°C		
Weatherab	ility		0	×	0		
	ance		0	×	0		
Alkaline-resistance Self-lubricity Abrasion-resistance		ce	0	Δ	0		
Self-lubrici	ty		0	0	0		
Abrasion-r	n-resistance		0	0	0		
Volume res	sistano	De .	_	-	10 ⁵ ~10 ⁶ Ω·cm		

○ : Suitable

 \triangle : Good ×:NG


Note 1) The above "Physical Properties" shows the data of pad resin material only. The holder of Mark-free Series is not included.

Note 2) The above "Physical Properties" shows the data of resin attachment only. The pad rubber is not included.

Note 3) The above "Physical Properties" shows general properties of resin materials and not a guaranteed value. Carry out the necessary evaluation under an actual operating condition.

Note 4) The highest / lowest operating temp. is for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.

Note 5) Volume resistance is a representative value from the material manufacture, and not a guaranteed value.

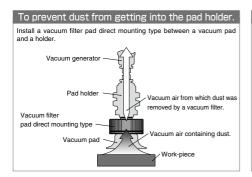

To operate several vacuum pads by single vacuum source. Installing a fall prevention valve between a vacuum pad and a holder prevents the troubles like system break down, minimizing the vacuum drop of the whole system automatically by reducing suction flow of the part where the work-piece falls from the vacuum pad (within the range not causing any problem), or no work-piece is to be sucked. Pad holder


Vacuum pad Work piece

Air Pincett

Reference Guide for Vacuum Pad


Impact on pad

Avoid an impact or a large force on a vacuum pad, when it is pressed against a work-piece. It may cause deformation, crack or abrasion at an early stage of use. Adjust the pad position so that the lip of pad touches lightly on a work-piece. Especially a small type of vacuum pad should be positioned precisely.

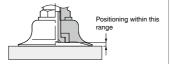


Porous or perforated work-piece

Since the suction of a porous work-piece causes a drop of suction force, select the proper specifications of vacuum system and secure a larger effective cross-section area of the piping. Selecting a small type of vacuum pad is one of solutions to reduce the air leakage.

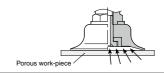


Large and wide flat plate work-piece

When lifting large size of glass board or circuit board, work-piece may bend by the lifting acceleration or the self-weight. Select a proper size of pad and positioning, considering an enough margin of suction force.

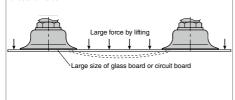

Lifting work-piece, sucking the both side of it

Since all vacuum pad holders are designed for horizontal lifting, consider the strength of holders and pads.

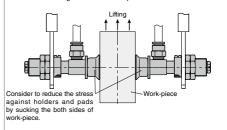


Soft work-piece

When soft work-pieces such as plastic bags, papers or thin boards are sucked, work-pieces can be deformed or shrunk by vacuum suction (Figure-1). Select smaller vacuum pads and reduce the vacuum pressure. Smaller vacuum pads are suitable for plastic bags and papers. When plastic / paper bags are opened by using vacuum pads, shift the center of two vacuum pads slightly in order to open them easily as Figure-2 shows.




Work-piece with different heights

Select Long Stroke Series for work-pieces having different heights, or piled-up work-pieces. Its stroke can absorb the difference in height.

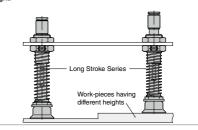


Inclined work-piece

Select Free Holder for an inclined work-piece.

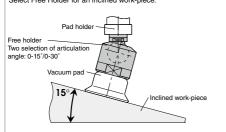

Conveyance with rotary movement

When vacuum pad is fixed with a screw and has a rotary movement, the pad may drop due to the loosened screw. Pay special attention when the vacuum location of work-piece is off the center of work-piece gravity.

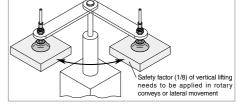

Pad dia. list by pad type and material

Pa	d material		N : Nitrile rubber										
P	ad type		Standard		Bellows	Multi-	Soft	Soft	Ultrathin	Flat			
		General type	Deep type	Small type	200110	Bellows	00.1	bellows	O la calcini				
	ø0.7			•									
	ø1	•		•									
	ø1.5			•									
	ø2	•		•									
	ø3	•		•									
	ø4	•		•			•						
Ī	ø6	•			•		•	•					
	ø8	•			•		•	•	•				
Pac	ø10	•			•	•	•	•	•	•			
Pad dia. (mm)	ø15	•	•		•		•	•	•	•			
ا بر	ø20	•	•		•	•	•	•	•	•			
3 [ø25	•	•		•					•			
	ø30	•	•		•	•	•			•			
	ø40	•	•		•	•	•						
	ø50	•	•		•	•							
	ø60	•	•		•								
	ø80	•	•		•								
	ø100	•	•		•								
Ì	ø150	•											
	ø200	•											

※ . ● : available

Pa	d material					SIS	Silicone ru	ibber				
Pad type		Standard General type Deep type Small type		Bellows	Multi- Bellows	Soft	Soft bellows	Flat	Skidproof	Ultrathin	Sponge	
	ø0.7	,,	, ,,	•								
Ī	ø1	•		•								
	ø1.5			•								
	ø2	•		•								
	ø3	•		•								
	ø4	•		•			•					
	ø6	•			•		•	•				
	ø8	•			•		•	•			•	
Pad dia. (mm)	ø10	•			•	•	•	•	•	•	•	•
	ø15	•	•		•		•	•	•		•	•
<u>e</u> .	ø20	•	•		•	•		•		•	•	•
<u>ب</u> (ø25	•	•		•				•			•
M	ø30	•	•		•	•	•		•	•		•
	ø35											•
	ø40	•	•		•	•	•			•		
	ø50	•	•		•	•				•		•
	ø60	•	•		•							
	ø70											•
	ø80	•	•		•							
	ø100	•	•		•							•
	ø150	•										
	ø200	•										

Air Pincett

l type				U : Urethane rubber					
i type	Standard			Bellows	Multi-	Soft	Skidproof	Ultrathin	Flat
	General type	Deep type	Small type	Dellows	Bellows	bellows	Skiupiooi	Ollialilli	Fidi
ø0.7			•						
ø1	•		•						
ø1.5			•						
ø2	•		•						
ø3	•		•						
ø4	•		•						
ø6	•			•		•			
ø8	•			•		•		•	
ø10	•			•	•	•	•	•	•
ø15	•	•		•		•		•	•
ø20	•	•		•	•	•	•	•	•
ø25	•	•		•					•
ø30	•	•		•	•		•		•
ø40	•	•		•	•		•		
ø50	•	•		•	•		•		
ø60	•	•		•					
ø80	•	•		•					
ø100	•	•		•					
ø150	•								
ø200	•								
000000000000000000000000000000000000000	91.5 92 93 94 96 98 910 915 920 940 950 960 980 9100 915 930 940 950 960 980 9100 915 920	21.5 22 23 24 26 26 27 28 28 28 28 28 28 28 28 28	02	01.5	01.5	01.5	01.5	01.5	01.5

※ . ● : available

Pa	d material			F: Fluoro rubber						G: NBR Suited for the food sanitation act. (Japan)			
	ad type		Standard		Bellows	Multi-	Skidproof	Liltrothin	Flat		Standard		Multi-
	au type	General type	Deep type	Small type	Dellows	Bellows	Skiupiooi	Ollialilli	rial	General type	Deep type	Small type	Bellows
	ø0.7			•								•	
l	ø1	•		•						•			
Į	ø1.5			•									
	ø2	•		•						•		•	
	ø3	•		•						•			
	ø4	•		•									
	ø6	•			•					•			
_ [ø8				•			•		•			
Pad dia. (mm)	ø10	•			•	•	•	•	•	•			
읈[ø15	•	•		•			•	•	•	•		
=	ø20	•	•		•	•	•	•	•	•	•		•
3 [ø25	•	•		•				•	•	•		
	ø30	•	•		•	•	•		•	•	•		•
	ø40	•	•		•	•	•			•	•		•
	ø50	•	•		•	•	•			•	•		•
	ø60	•	•		•								
	ø80	•	•		•								
	ø100	•	•		•								
	ø150	•											
	ø200	•											

PAD		
_		•

Pa	d material		SE : Cor	nductive Silico	one rubber			ve Butadiene esistance type)	S: Chloroprene rubber	NH : Oilproof NBR
	ad type	Standard		Bellows	Soft	Flat	Stan		Sponge	Skidproof
	au type	General type	Small type	Dellows	3011	Ιιαι	General type	Small type	Sporige	Skiupiooi
	ø0.7		•					•		
	ø1	•	•				•	•		
	ø1.5		•					•		
	ø2	•	•				•	•		
	ø3	•	•				•	•		
	ø4	•	•		•		•	•		
	ø6	•		•	•		•			
	ø8	•		•	•		•			
_[ø10	•		•	•	•	•		•	•
ad	ø15	•		•	•	•	•		•	
Pad dia. (mm)	ø20	•		•	•	•	•		•	•
э. (г	ø25	•		•		•	•		•	
M [ø30	•		•	•	•	•		•	•
$\overline{}$	ø35								•	
	ø40	•		•	•		•			•
	ø50	•		•			•		•	•
	ø60	•		•						
	ø70								•	
	ø80	•		•						
	ø100	•		•					•	
	ø150	•								
	ø200	•								

Pa	d material	NE : Conductive NBR (low resistance)									
F	ad type		Standard		Bellows	Multi-	Soft	Soft	Skidproof	Ultrathin	Flat
		General type	Deep type	Small type		Bellows		bellows	- 1		
ļ	ø0.7			•							
	ø1	•		•							
	ø1.5			•							
	ø2	•		•							
	ø3	•		•							
Ì	ø4	•		•			•				
Ì	ø6	•			•		•	•			
Ì	ø8	•			•		•	•		•	
Pac	ø10	•			•	•	•	•	•	•	•
di	ø15	•	•		•		•	•		•	•
a. (ø20	•	•		•	•	•	•	•	•	•
Pad dia. (mm)	ø25	•	•		•						•
_	ø30	•	•		•	•	•		•		•
Ì	ø40	•	•		•	•	•		•		
	ø50	•	•		•	•			•		
	ø60	•	•		•						
	ø80	•			•						
	ø100	•	•		•						
	ø150	•									
	ø200	•									

^{※ . ● :} available

Air

Pad material HN: HNBR EP : EPDM FS : Fluorosilicone rubber Standard Multi-Soft Standard Multi-Soft Pad type Bellows Bellows Soft Ultrathin General type Deep type Small type Bellows | Bellows | General type | Deep type | Small type Bellows bellows ø0.7 ø1 • • • • ø1.5 ø2 ø3 • • • • ø4 • • • • lacktriangleø6 • • • ø8 • • Pad dia. (mm) ø10 • • • • • • • • ø15 ø20 • ø25 • • • ø30 • • • • • • • • • ø40 • • • • • ø50 • • • • • ø60 • • • ø80 • ø100 ø150 • • ø200 •

※ . ● : available

_										
Pa	d material	Nitrile rubber	Silicone rubber	Urethane rubber	F Fluoro rubber	SE Conductive Silicone rubber	Conductive Butadiene rubber (Low resistance type)	NE Chloroprene rubber	HN HNBR	EP EPDM
ı	Pad type					Oval				
	2×4	•	•	•	•	•		•	•	•
	3.5×7	•	•	•	•	•		•	•	•
	4×10	•	•	•	•	•	•	•	•	•
	4×20	•	•	•	•	•	•	•	•	•
P	4×30	•	•			•	•	•	•	•
g	5×10	•	•	•	•	•	•	•	•	•
Pad size (mm)	5×20	•	•	•	•	•	•	•	•	•
(E)	5×30	•	•	•	•	•	•	•	•	•
⋽	6×10	•	•	•	•	•	•	•	•	•
	6×20	•	•	•	•	•	•	•	•	•
	6×30	•	•	•	•	•	•	•	•	•
	8×20	•	•	•	•	•	•	•	•	•
	8×30	•	•	•	•	•	•	•	•	•


※ . ● : available

Pa	d material	K : PEEK	M : POM	KE : Conductive PEEK	Q2K : PEEK	Q2M : POM	G2KE : Conductive PEEK
F	ad type	Mark free			Resin attachment for Bellows series		
Pa	ø10	•	•	•	•	•	•
g	ø15				•	•	•
ize	ø20	•	•	•	•	•	•
Œ[ø25				•	•	•
3	ø30	•	•	•	•	•	•

■ Construction (VPA holder : Fixed type / Top port) |



■ Construction (VPC holder : Spring type / Top port) |

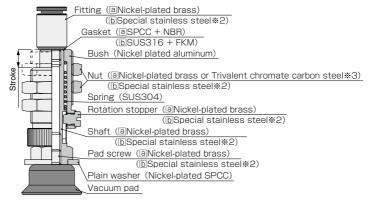

- * 1. a : Standard spec. b : "-S3" spec.
- * 2. Equivalent Corrosion Resistance to SUS303
- * 3. Nut material differs depending on the bulkhead thread size.

Bulkhead thread size	Nut m	naterial
(mm)	Nickel-plated brass	Trivalent chromate carbon steel
M5×0.5	0	_
M6×0.75	0	_
M8×0.75	0	_
M10×1	0	_
M12×1	_	0
M14×1	_	0
M16×1	_	0
M20×1	_	0
M22×1	_	0
M24×2	0	_
M30×2	0	_

This Safety Instructions aim to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370.

ISO 4414: Pneumatic fluid power···General rules and safety requirements for system and their components.

JIS B 8370: General rules and safety requirements for systems and their components.

This Safety instructions are classified into "Danger", "Warning" and "Caution", depending on the degree of danger or damages caused by improper use of PISCO products.

Hazardous conditions. It can cause death or serious personal injury.



Hazardous conditions depending on usages. Improper Use of PISCO products can case death or serious personal injury.



Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.

- 1. Do not use PISCO products for the following applications.
 - ①. Equipment used for maintaining / handling human life and body.
 - ②. Equipment used for moving / transporting human.
 - ③. Equipment specifically used for safety purposes.

Marning ■

- 1. Selection of pneumatic products.
 - ① A user who is a pneumatic system designer or has sufficient experience and technical expertise should select PISCO products.
 - ② Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunction.
- 2. Usage environment

Do not use PISCO products under the following conditions.

- ①. Beyond the specifications or conditions stated in the catalog, or the instructions.
- ②. Use at outdoors.
- Excessive vibrations and impacts.
- Exposure / adhere to corrosive gas, flammable gas, chemicals, seawater, water and vapor.

40

^{※ .} Safety Instructions are subject to change without notice.



3. Handling of product

- ①. The pneumatic equipments shall be handled by a person having enough knowledge and experiences. Improper use of compressed air is dangerous. Assembly, operation and maintenance of machines using pneumatic equipment should be conducted by a person with enough knowledge and experience.
- Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.
 - (1). Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
 - (2). Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
 - (3). Restart the machines with care after ensuring to take all preventive measures against sudden movements.
- ③. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
- ④. Take safety measures such as providing a protection cover if there is a risk of causing damages or fire on machine / facilities by a fluid leakage.
- Do not touch the release-ring of push-in fitting when there is a working pressure.
- Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
- ②. Avoid any load on PISCO products, such as, a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
- ®. Do not use PISCO products for applications where threads or tubes swing / rotate. The product can be damaged in these applications.
- ① Do not force the product to rotate or swing even its resin body is rotatable. It may cause damage to the product and a fluid leakage.
- ① Do not supply excessively dry air to products. It may cause malfunction due to a deterioration of rubber parts.
- ①. Do not wash or paint products with water or solvent. Solvent may damage a resin body, or painting may cause malfunction.
- ®. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the highvoltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
- ③. Do not stand on a product, or put anything on it. It may cause falls, personal injury or damage to the product.

Safety Instructions

Warranty

When the product produces a trouble, which is caused by our responsibility, we will carry out either one of the following measures immediately.

- (1). Free-of-charge replacement of same product
- ②. Free-of-charge repair of the product at our factory

Disclaimer

- 1. PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
- 2. When a cause of the trouble/malfunction applies to any of the following items, it is excluded from the coverage of the above warranty.
 - ①. A case by a natural disaster, a fire except our responsibility, the act by the third person/party, the intention or fault of the customer.
 - ②. A case when a product is used out of the specific range or the method listed in the product catalog or the instruction manual.
 - A case by the remodeling of the product or by a change of structure, performance, or specifications which PISCO does not involved in.
 - ④. A case by the event that is unpredictable by the evaluations and the measures at the time on or before the initial delivery.
 - ⑤. A case caused by the phenomenon that is able to be evaded if your machine or equipment has functions or structures that are comprised in a common sense when this product is incorporated in your machine or equipment.
- 3. The damages caused by the defect of PISCO products shall be covered but limited to the full amount of the PISCO products paid by the customer. Additionally, the above warranty is limited simply to the product itself. The damage induced by the trouble of the product will not be compensated.





Common Safety Instructions for Products Listed in This Catalog

- 1. An odd noise may be heard when supply pressures are immediately before the peak of vacuum levels. The sounding of this odd noise means the characteristics are unstable and the sound may become even noisier. This situation can also adversely affect the sensor, resulting in a malfunction or trouble. So reset the supply pressure.
 - %. Pressure range in which odd noise occurs is affected by atmospheric pressure.
- 2. Piping design and equipment selection should be made with an effective sectional area on supply pressure side of a vacuum generator being 3 times as large as the nozzle diameter as a standard. Insufficient air flow may impair the performance of the product.
- 3. Do not use a lubricator on products.
- 4. Clean or replace silencer element periodically. There is a possibility of dropping the performance or causing troubles by clogging on the element.
- 5. Keep products away from water, oil drops or dusts because they are neither drip-proof nor dust-proof. Otherwise there is a possibility of causing malfunction, damage to the products, or dropping the performance.
- 6. Piping
 - ①. Compressed air contains a volume of drain (water, oxidized oil and foreign material, etc.) Because the drain reduce product performance remarkably, dehumidify air with an aftercooler and a dryer, and improve the air quality.
 - Do not use a lubricator on products.
 - Rust in pipe and inflow of foreign substances cause the trouble. malfunction, and degradation of the product. Please install a filter (5 μ m) or better filtration) in the compressed air supply line right in front of the product. The flushing inside the pipe before use and in certain intervals is recommended.
 - Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
 - (5). When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
 - Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of
 - (7). Install protective cover when using at a place getting the direct sunlight.
 - Be sure to confirm each port of a vacuum generator with its appearance drawing or the marking on it before piping. Incorrect piping has a risk of damaging the product.
 - at the end of vacuum system as much as possible. A long distance between a pressure sensor and a vacuum system end may increase plumbing resistance which may lead to a high vacuum level at the sensor even when no suctioning and a malfunction of pressure sensor. Make sure to evaluate the products in an actual system.

- ①. A Shorter distance of plumbing with a wider bore is preferable at vacuum system side. A long plumbing with a small bore may result in slow response time at the time of releasing work-piece as well as in failure to secure adequate suction flow rate.
- ①. In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.


_	T - I- I -	- T	TL	\cap	Tolerance


mm size	Nylon tube	Polyurethane tube
ø1.8mm	_	±0.05mm
ø2mm	_	±0.05mm
ø3mm	_	±0.15mm
ø4mm	±0.1mm	±0.15mm
ø6mm	±0.1mm	±0.15mm
ø8mm	±0.1mm	±0.15mm
ø10mm	±0.1mm	±0.15mm
ø12mm	±0.1mm	±0.15mm
ø16mm	±0.1mm	±0.15mm

inch size	Nylon tube	Polyurethane tube
ø1/8	±0.1mm	±0.15mm
ø5/32	±0.1mm	±0.15mm
ø3/16	±0.1mm	±0.15mm
ø1/4	±0.1mm	±0.15mm
ø5/16	±0.1mm	±0.15mm
ø3/8	±0.1mm	±0.15mm
ø1/2	±0.1mm	±0.15mm
ø5/8	±0.1mm	±0.15mm

7-1. Tube insertion (Push-in fitting)

- ①. Make sure that the cut end surface of the tube is at a right angle without a scratch on the tube surface or deformations.
- ②. When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

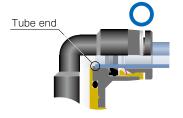

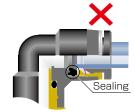

Tube is not fully inserted up to tube end.

- 3. After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
 - **. When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings; ① Shear drop of the lock-claws edge ② The problem of tube diameter (usually small). Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.

7-2. Tube insertion (Compression fitting)

①. Make sure that the cut end surface of the tube is at a right angle without deformations or a scratch on its inner and outer surface.



- Pass the tube through the nut and insert the barb into the tube up to the barb end. Then tighten the hexagonal-column of the nut with a proper tool.
- ③. Refer to Table 2 which shows the tightening torque.
 - *. Hold the tube when tightening the nut, since the tube may rotate along with the nut.
- ④. Make sure that the nut touches the metallic body. If not, loosen the nut, disconnect the tube and start over again from the process ①.
- ⑤. Make sure that there is no leakage after tightening the nut.
- ⑥. After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.

■ Table 2. Nut tightening torque

Tube O.D.	Tightening torque
ø10	Max.4N·m
ø12	Max.5N·m
ø16	Max.14N·m

8-1. Tube disconnection (Push-in fitting)

- ①. Make sure there is no air pressure inside of the tube, before disconnecting it.
- ②. Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.
- 8-2. Tube disconnection (Compression fitting)
 - ①. Make sure there is no air pressure inside of the tube, before disconnecting it.
 - ②. Use a proper tool to loosen the nut. Then disconnect the tube.
- 9. Installation of a fitting
 - ①. When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
 - ②. Refer to Table 3 which shows the tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket to cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage. Since the sealability is affected by the processing condition of the installing part, adjust the tightening torque or correct the installing part, according to the condition.
 - Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

■ Table 3. Tightening torque / Sealock color / Gasket materials

Tuble 6. Fightering torque / Coulock Color / Cubket materials				
Thread type	Thread size	Tightening torque	Sealock color	Gasket material
Metric thread	$M3 \times 0.5$	0.7N·m	n/a	SUS304+NBR SPCC+NBR
	$M5 \times 0.8$	1 ~ 1.5N·m		
	$M6 \times 1$	2 ~ 2.7N·m		
	$M3 \times 0.5$	0.7N⋅m		РОМ
	$M5 \times 0.8$	1 ~ 1.5N·m		
	$M6 \times 0.75$	0.8 ~ 1N·m		
	$M8 \times 0.75$	1 ~ 2N·m		
Taper pipe thread	R1/8	4.5 ~ 6.5N⋅m	White	_
	R1/4	7 ~ 9N⋅m		
	R3/8	12.5 ~ 14.5N·m		
	R1/2	20 ~ 22N·m		
Unified thread	No.10-32UNF	1 ~ 1.5N·m	n/a	SUS304+NBR, SPCC+NBR
National Pipe Thread Taper (American standard)	1/16-27NPT	4.5 ~ 6.5N⋅m	White	_
	1/8-27NPT	4.5 ~ 6.5N⋅m		
	1/4-18NPT	7 ~ 9N⋅m		
	3/8-18NPT	12.5 ~ 14.5N·m		
	1/2-14NPT	20 ~ 22N·m		
G thread	G1/4	12 ~ 14N·m	n/a	Aluminum + PBT
	G3/8	22 ~ 24N·m		
	G1/2	28 ~ 30N·m		

- *. These values may differ for some products. Refer to each specification as well.
- ④. When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ⑤. Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.
- 10. Handling of fitting
 - ①. Impact caused by dropping or the like may lead to damage to the product and a fluid leakage.